




BARRANCA DIAMOND

CAB COMBO WORKSHOP OWNER'S MANUAL & PARTS LIST

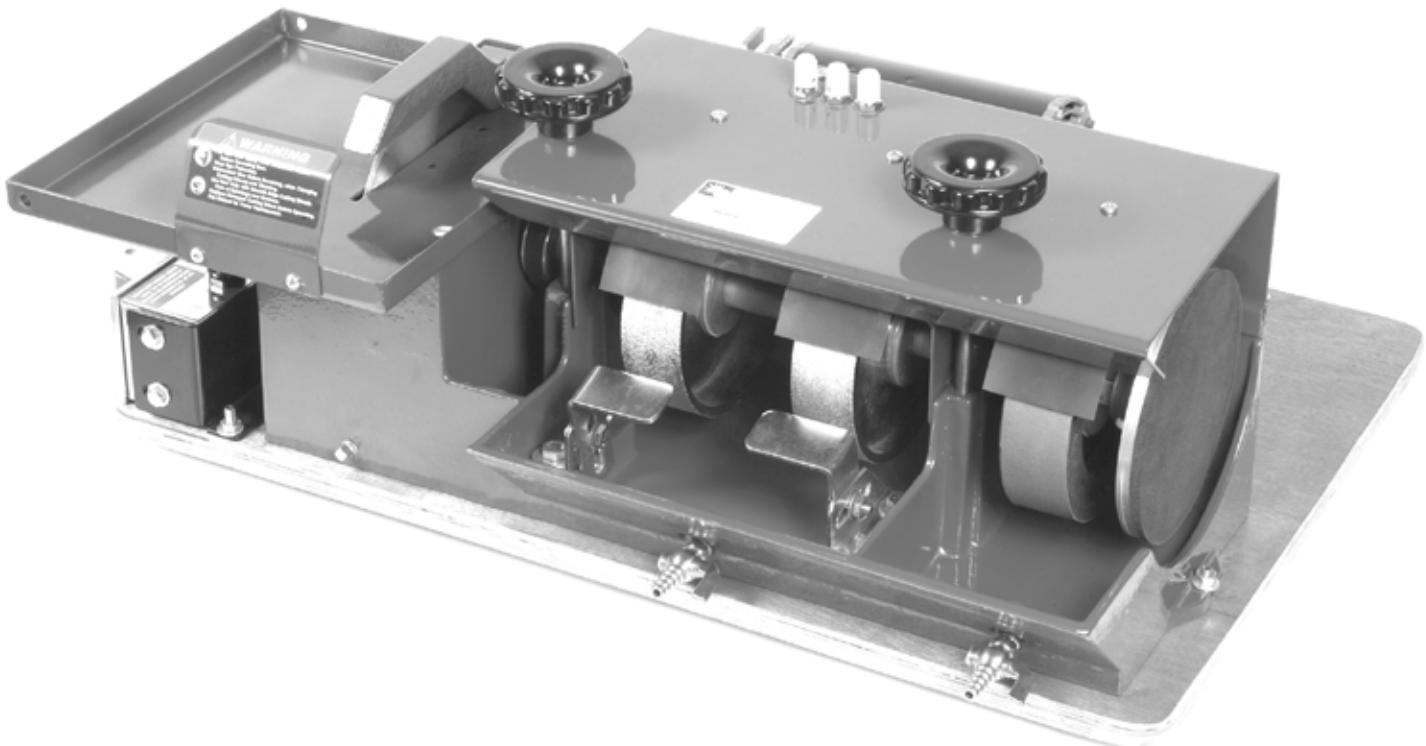

Revision 109	01.2022
Manual Part# 164271	

Caution: Read all safety and operating instructions before using this equipment. This owner's manual **MUST** accompany the equipment at all times.

Barranca Diamond Products, Inc.
1315 Storm Parkway
Torrance, CA 90501
Toll-Free: (800) 630-7682
Phone: (310) 523-5867
Fax: (310) 257-3063
www.barrancadiamond.com

INTRODUCTION

Thank you for selecting the Barranca Diamond Cab Combo Workshop. We are certain that you will be pleased with your purchase. Barranca Diamond takes pride in producing top quality products for hobbyists and commercial lapidary users throughout the world. This product is manufactured in the United States.

This owner's manual contains information necessary to operate and maintain your Cab Combo Workshop safely and correctly. Operated correctly, the Cab Combo Workshop should provide you with years of service. Please take the time to familiarize yourself with the Cab Combo Workshop by reading and reviewing this manual.

If you should have questions concerning your Cab Combo Workshop, please call Barranca Diamond at: (310) 523-5867 or Toll Free: (800) 630-7682.

NOTE THIS INFORMATION FOR FUTURE USE:

MODEL NUMBER:	
SERIAL NUMBER:	
PURCHASE PLACE:	
PURCHASE DATE:	

WARRANTY: For your (1) one year warranty to be effective, complete the online Product Registration as soon as possible. Visit www.mkdiamond.com/registration/

TABLE OF CONTENTS

TABLE OF CONTENTS

SAFETY

Safety Precautions	4
California Proposition 65 Warning	7
Electrical Requirements	8-9
Safety Label	10

Product Specifications	11
------------------------	----

SETUP

Contents	12
Unpacking	12
Transport	12
Installation of Blade	13-14
Rock Vise	15

OPERATION AND ADJUSTMENT

Pre-Start	16
Start-Up	17
Pump Set-Up	18-19
Needle Valves	19
Drain Valves	19
Trim Sawing	20
Diamond Wheels	20-21
Expandable Drum & Resin Belts	22
Polishing with Diamond Paste	22
Polishing with Leather Buff Pad	23

MAINTENANCE

Diamond Wheel Replacement	24-25
Shaft Reassembly	25-28
Coolant Replacement	28
Belt	29
Blade Arbor & Pulleys	30
Electric Motor	30
Diamond Blade	31
Submersible Pump	32

EXPLODED VIEW & PARTS LIST	34-43
---------------------------------------	-------

WARRANTY	44-46
-----------------	-------

SAFETY PRECAUTIONS

Read and follow all safety, operating and maintenance instructions. Failure to read and follow these instructions could result in injury or death to you or others. Failure to read and follow these instructions could also result in damage and/or reduced equipment life. In order to prevent injury, the following safety precautions should be followed at all times!

READ OWNER'S MANUAL BEFORE USE

Before using this equipment, ensure that the person operating this machine has read and understands all of the instructions in the manual. Precaution is the best insurance against accidents. Read and understand all safety precautions, messages, warnings and hazard symbols. You are responsible for your own safety.

ALWAYS USE SAFETY GLASSES

Safety glasses should always be worn when working around power tools. In addition, a face, dust mask or respirator should be worn if a cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses and may not prevent eye injury - they are NOT safety glasses.

USE PROPER APPAREL

Do not wear loose clothing, gloves, neckties, rings, bracelets or other jewelry that may be caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair. Hand protection (plastic gloves) and a shop bib are recommended during sawing to prevent stains to clothing. Avoid prolonged exposure of skin to the sawing lubricant and wash skin immediately after contact. Do not touch the work material until the motor is off and the machine has come to a complete stop.

ALWAYS USE HEARING PROTECTION

To reduce the possibility of hearing loss, always use hearing protection when operating power equipment.

KEEP GUARDS IN PLACE

In order to prevent injury, never operate the saw without the guards in place!

REMOVE ADJUSTING KEYS AND WRENCHES

Form a habit of checking to see that keys and adjusting wrenches are removed from the power tool before it is turned on.

ELECTRICAL SHOCK

Never touch electrical wires or motor components while the motor is running. Exposed, frayed or worn electrical wiring and plugs can be sources of electrical shock that could cause severe injury or burns. Use the GFCI (Ground Fault Circuit Interrupter Switch) included with the unit attached to the main motor power cord plug and keep plugged into the power receptacle outlet source.

DISCONNECT TOOLS

Power tools should always be disconnected before servicing or when changing accessories, such as blades, bits, cutters and the like.

REDUCE THE RISK OF UNINTENTIONAL STARTS

Make sure the ON/OFF switch is in the OFF position before plugging in a power tool.

ROTATING OR MOVING PARTS

Keep hands, feet, hair, and clothing away from all moving parts to prevent injury. Never operate the engine with covers, shrouds or guards removed.

MAINTAIN TOOLS WITH CARE

Keep tools clean for the best and safest performance. Always follow maintenance instructions for lubricating and when changing accessories.

KEEP WORK AREA CLEAN

Cluttered work areas and benches invite accidents.

DO NOT USE IN DANGEROUS OR HAZARDOUS ENVIRONMENTS

Do not operate equipment in dangerous or hazardous environments. Do not use power tools in damp or wet locations nor expose them to rain. Always keep the work area well lighted. Always work in a well ventilated area.

KEEP CHILDREN AWAY

All visitors and children should be kept a safe distance from the work area. Keep power cords disconnected when tool is not in use.

MAKE THE WORKSHOP KID-PROOF

Make the workshops kid-proof by using padlocks, master switches and by disconnecting all power cords.

USE THE RIGHT TOOL

Do not force a tool or an attachment to do a job that it was not designed to do.

SECURE WORK

Clamps or a vise should be used to hold work whenever practical. Keeping your hands free to operate a power tool is safer.

DO NOT FORCE THE TOOL

A power tool will do a better job and operate more safely at the feed rate for which it was designed.

USE THE RIGHT TOOL TO SERVICE THE SAW

Do not force a tool or an attachment when servicing or operating the Cab Combo Workshop. Use the correct tools for service or adjustments.

DO NOT OVERREACH

Keep proper footing and balance at all times by not overreaching.

DO NOT OPERATE A TOOL WHEN TIRED

When tired, take a break and relax.

DIRECTION OF FEED

Always feed work into a blade or cutter in the direction shown in this manual. All blades, grinding wheels or polishing belts should always be installed such that rotation is in the direction of the arrow imprinted on the blade, wheel or belt.

ONLY OPERATE AT THE PROPER SPEED

Severe personal injury and damage to the motor or equipment can result if operated at speeds above maximum.

NEVER LEAVE A TOOL RUNNING UNATTENDED – TURN POWER OFF

Do not leave a tool until it comes to a complete stop. Always turn the tool off, and disconnect the power cord to its source, when leaving the work area or when work is finished. Do not leave extension cords attached to the power cord or power receptacle (wall outlet) when leaving the work area.

CHECK FOR DAMAGED OR WORN PARTS

Before using a power tool, check for damaged parts. A guard or any other part that is damaged should be carefully checked to determine if it would operate properly and perform its intended function. Always check moving parts for proper alignment or binding. Check for broken parts and mountings and all other conditions that may affect the operation of the power tool. A guard, or any damaged part, should be properly repaired or replaced.

USE RECOMMENDED ACCESSORIES AND PARTS

Consult the owner's manual for recommended accessories and parts. Using improper parts and accessories may increase the risk of personal and/or bystander injury.

USE THE PROPER EXTENSION CORD

If using an extension cord, make sure it is in good condition first. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage that will result in a loss of power and overheating. Table on page 8 shows the correct AWG (American Wire Gauge) size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.

USE A GROUND FAULT CIRCUIT INTERRUPTER

Use of a Ground Fault Circuit Interrupter (GFCI) between the end of power cord and wall outlet is required at all times.

USE THE PROPER POWER SOURCE

This tool is only to be used with a 120 volt 60 HZ power source. Ensure power source is at least 15 amps and 110 to 120 volts. Low voltage current can adversely effect electric motor performance and overall life.

USE THE RECOMMENDED COOLING AND LUBRICATING FLUIDS

Never operate a tool dry that requires coolant or lubricant. This can lead to shortened tool life, tool damage and personal injury.

MAINTAIN TOOLS WITH CARE

Keep the diamond blade sharp, the sawing lubricant clean and reservoir filled to the correct level for the best and safest performance. Always follow the maintenance instructions for sharpening the blade, lubricating and servicing the Cab Combo Workshop.

SILICA DUST WARNING

Grinding/cutting/drilling of masonry, concrete, metal and other materials with silica in their composition may give off dust or mists containing crystalline silica. Silica is a basic component of sand, quartz, brick clay, granite and numerous other minerals and rocks. Repeated and/or substantial inhalation of airborne crystalline silica can cause serious or fatal respiratory diseases, including silicosis. In addition, California and some other authorities have listed respirable crystalline silica as a substance known to cause cancer. When cutting such materials, always follow respiratory precautions.

Use appropriate NIOSH-approved respiratory protection where dust hazard may occur. Paper masks or surgical masks without a NIOSH approval number are not recommended because they do little to protect the worker. For more information about respirator programs, including what respirators have received NIOSH approval as safe and effective, please visit the NIOSH website at:

<http://www.cdc.gov/niosh/topics/respirators>

Observe OSHA regulations for respirator use (29 C.F.R. §1910.134 and §1503.1).

Visit <http://www.osha.gov> for more information.

CALIFORNIA PROPOSITION 65 MESSAGE

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contain chemicals known (to the State of California) to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead, from lead-based paints
- Crystalline silica, from bricks and cement and other masonry products
- Arsenic and chromium, from chemically treated lumber

For further information, consult the following sources:

<http://www.osha.gov/dsg/topics/silicacrystalline/index.html>

<http://www.cdc.gov/niosh/docs/96-112/>

<http://oehha.ca.gov/prop65/law/P65law72003.html>

<http://www.dir.ca.gov>Title8/sub4.html>

<http://www.P65warnings.ca.gov>

Your risk from these exposures varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles. Where use of a dust extraction device is possible, it should be used. To achieve a high level of dust collection, use an industrial HEPA vacuum cleaner. Observe OSHA 29 CFR part 1926.57 and 1926.103.

ELECTRICAL REQUIREMENTS AND GROUNDING INSTRUCTIONS

In order to prevent potential electrical shock and injury, the following electrical safety precautions and symbols should be followed at all times!

In case of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This tool is equipped with an electric cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances.

- Do not modify the plug provided – if it will not fit the outlet; have the proper outlet installed by a qualified electrician.
- Improper connections of the equipment-grounding conductor can result in a risk of electric shock. The equipment-grounding conductor is the wire that has a green outer surface, with or without yellow stripes. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.
- Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the tool is properly grounded.
- Use only 3-wire extension cords that have 3-prong grounding plugs and 3-pole receptacles that accept the tool's plug.
- Repair or replace a damaged or worn cord immediately.


This tool is intended for use on a circuit that has an outlet that looks like the one shown in Sketch A. The tool has a grounding plug that looks like the plug illustrated in Sketch A. A temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in Sketch B, if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet can be installed by a qualified electrician. The green-colored rigid ear, plug, and the like, extending from the adapter, must be connected to a permanent ground, such as a properly grounded outlet box.

NOTE: Use of a temporary adapter is not permitted in Canada.

To reduce the risk of electrocution, keep all connections dry and off the ground.

A Ground Fault Circuit Interrupter (GFCI) should be provided on the circuit(s) or outlet(s) to be used for this power tool. Receptacles are available, having built-in GFCI protection, and may be used for this measure of safety.

When using an extension cord, the GFCI should be installed closest to the power source, followed by the extension cord, and lastly, the saw.

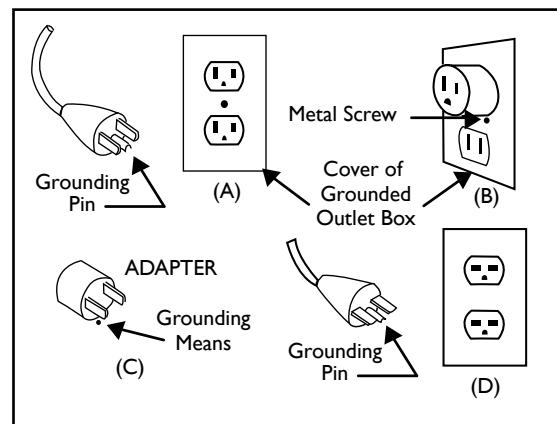


Circuit and Adapter Information

ELECTRICAL REQUIREMENTS AND GROUNDING INSTRUCTIONS

To avoid the possibility of the appliance plug or receptacle getting wet, position the tool to one side of a wall mounted receptacle. This will prevent water from dripping onto the receptacle or plug. A "drip loop," shown in Fig 2, should be arranged by the user to properly position the power cord relative to the power source.

The "drip loop" is the part of the cord below the level of the receptacle, or the connector, if an extension cord is used. This method of positioning the cord prevents the travel of water along the power cord and coming in contact with the receptacle.

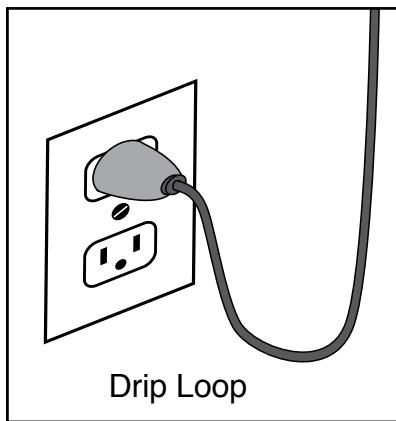

If the plug or receptacle gets wet, DO NOT unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the tool. Then unplug and examine for presence of water in the receptacle.

Use only extension cords that are intended for outdoor use. These extension cords are identified by a marking "Acceptable for use with outdoor appliances; store indoors while not in use." Use only extension cords having an electrical rating not less than the rating of the product. Do not use damaged extension cords. Examine extension cords before using and replace if damaged. Do not abuse extension cords and do not yank on any cord to disconnect. Keep cords away from heat and sharp edges. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.

To reduce the risk of electrocution, keep all connections dry and off the ground. Don't touch the plug with wet hands.

Use of undersized extension cords will result in low voltage to the motor that can result in motor burnout and premature failure. Barranca Diamond warns that equipment returned to us showing signs of being run in a low voltage condition, through the use of undersized extension cords, will be repaired or replaced totally at the customer's expense. There will be no warranty claim.

To choose the proper extension cord:

- Locate the length of extension cord needed in Table below.
- Once the proper length is found, move down the column to obtain the correct AWG size required for that length of extension cord.

MOTOR SPECS			EXTENSION CORD LENGTH			
Motor	Voltage	Amps	25'	50'	100'	200'
161672	115V 1 Ph	3.3	18 ga	16 ga	14 ga	10 ga

SAFETY LABEL LOCATIONS

Safety labels contain important safety information. Please read the information contained on each safety label. These labels are considered a permanent part of your saw. If a label comes off or becomes hard to read, contact Barranca Diamond or your dealer for a replacement.




Part # 164202

A


Part # 155587

B

Part # 171239

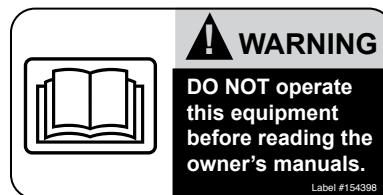C

Part # 154398

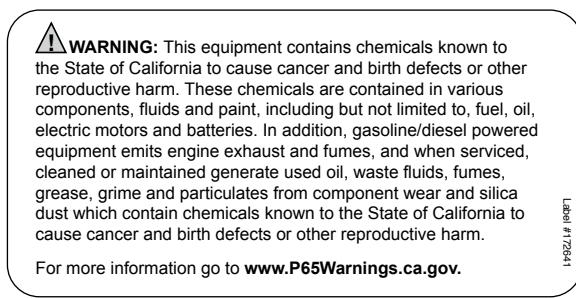D

Part # 172641

E

Part # 154822

F

Part # 155678

G

Decal	Location
A	Hood
B	Belt Guard
C	Hood
D	Hood
E	Hood
F	Hood
G	Hood

Description
Warning - Dust Control
Caution - Guards in Place
QR Code for Manuals & Safety Information
Warning- Read Manual
Warning - Silica Prop 65
Caution - Receptacle
Caution - Use with GFCI only

CAB COMBINATION WORKSHOP SPECIFICATIONS

Part #8300011	Carbide wheels and diamond belts
Part #8300012	Diamond wheels and diamond belts
Part #8300010	Carbide configuration without motor, GFCI, switch & base board
Part #8300013	Diamond configuration without motor, GFCI, switch & base board
Part #8300014	No wheels, belts, blade, GFCI, switch, motor, base board or polishing supplies
Horsepower	1/3 HP
Motor Voltage/Frequency	110 volt/60 Hz
Amperage	5.8 Amps
Motor RPM	1725
Motor Arbor Diameter	1/2"
Duty	Continuous, automatic thermal protection shut-off
Motor Arbor Bearings	Ball bearings, permanently sealed
Blade Capacity	6" diameter
Saw Lubricant	Oil or water with rust inhibitor (Tool Cool)
Motor and Shaft Pulley	2" OD x 5/8" bore (shaft) and 2" OD x 1/2" bore (motor)
Shaft Bearings	Permanently sealed 5/8" OD shaft ball bearings
Blade Arbor Flanges	2" OD x 5/8" bore aluminum
Maximum Depth of Cut	Not to exceed 1" for most cuts
Brazed Diamond Wheel	80 and 200 grit
Diamond Resin Belts	400, 600, 1200 and 3000 grit 6" x 1-1/2" wide belt size
Expandable Rubber Drum	6" x 1-1/2" wide x 5/8" arbor
Shaft Type	5/8" precision-machined stainless steel
Wheel and Blade Flanges	Aluminum 2" OD x 5/8" bore
Wheel Spacers	7/8" OD x 5/8" ID aluminum (length varies for wheels and drum)
Convex Polishing End Hub	6" aluminum hub disc with 5/8"-11 right hand thread

Lubricant capacity of reservoir tank: 1/4 gallon will cover 1/4" of 6" blade.

Pump: MK Submersible pump (part #155987-VP), variable flow control with 1/4" ID tubing.

Water Control Valves: 3 stainless steel control valves, brass lever cock valve with barb for 1/4" ID tubing mounted on rear of the hood.

ON/OFF Switch Box: Lever operated switch box and pigtail female plug receptacle for submersible pump.

Standard Polishing Supplies: Three 6" Polytex pads, three diamond paste syringes (5 grams ea.), diamond paste (8,000, 14,000 and 50,000 grit), 6" leather buffering pad, 100 grit green silicon carbide blade sharpening stick (1" x 1" x 6"), 3M On-Off cement, submersible pump, 1/4" ID clear tubing, 3/8" ID clear tubing and GFCI.

CONTENTS

In the shipping crate, you will find one Barranca Diamond Cab Combo Workshop, one 6" x 0.020 x 5/8" 303 Pro diamond blade, one Ground Fault Circuit Interrupter (GFCI) and one 1" x 1" x 6" sharpening stick.

If included as part of your specific order you will also find a variety of accessories.

UNPACKING

Your Cab Combo Workshop has been shipped from the factory thoroughly inspected and tested. Remove the crating material (wood and plastic) from the baseboard and around the machine carefully using Phillips and standard screwdrivers, and a box cutter knife. Any accessories should be removed from the unit and put aside.

TRANSPORT

For safe transport, lubricant should be removed from the saw tank coolant and wheel reservoirs of the Cab Combo Workshop. Removal of the 6" diamond blade is recommended to prevent damage during transport.

INSTALLATION OF BLADE

Remove the saw table by unscrewing the four flat-head machine screws (fig 1) that secure the table to the reservoir tank. Remove the saw table and the cork gasket installed between the saw table and reservoir tank.

Remove the diamond blade from its carton and mount on the 5/8" blade arbor between the two aluminum flanges (fig 2 & 3) with the concave sides of the flanges facing the blade (fig 4).

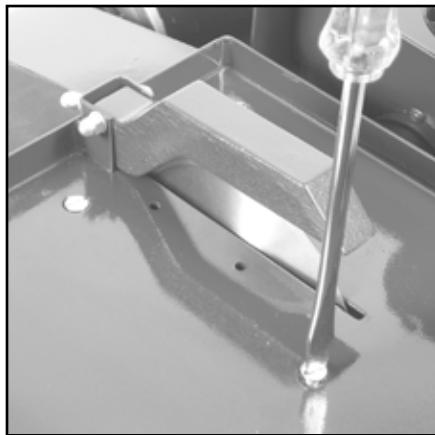


Fig 1 - Four flat-head machine screws secure the saw table to the reservoir tank

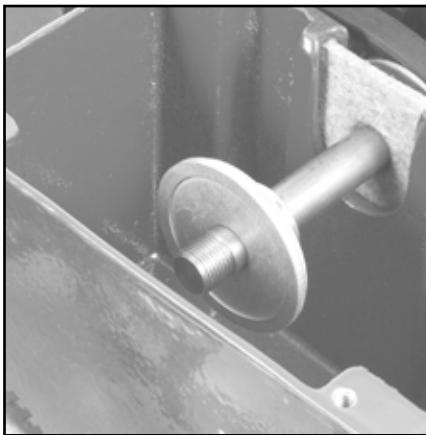


Fig 2 - Inner flange on shaft

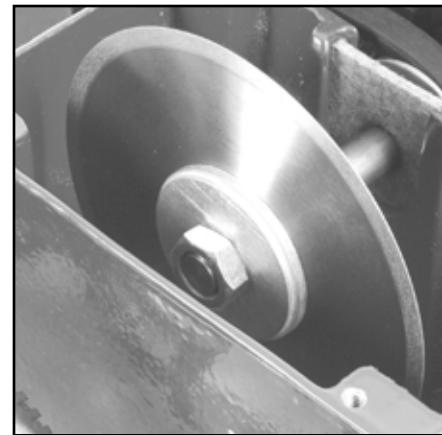


Fig 3 - Outer flange and nut installed on shaft

A 5/8"-18" left-hand fine-thread jam nut secures the flanges and blades to the arbor shaft. When installing the blade, use an adjustable wrench to turn the nut counterclockwise to tighten the nut against the arbor flange (fig 5). Do not over-tighten the jam nut.

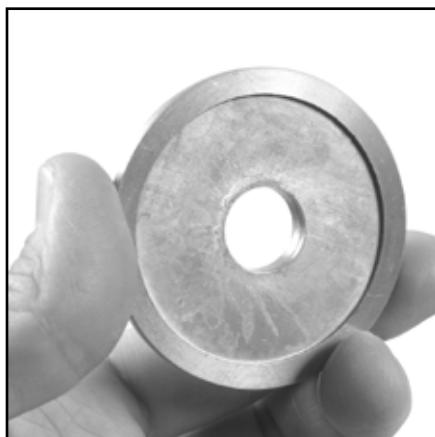


Fig 4 - Concave side of flange

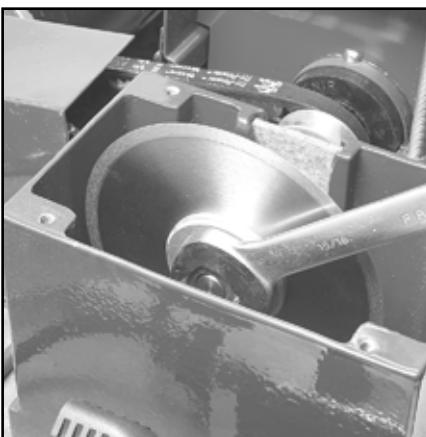


Fig 5 - Tightening the blade on the arbor shaft

The included 303 Pro diamond blade is manufactured to cut in a petroleum, mineral, or synthetic water-soluble lubricant. Although water can be used with the Cab Combo Workshop, it is not recommended as the steel arbor shaft and blade core can rust. In addition, poor sawing performance and short blade life can result. If water must be used, it is recommended that a rust inhibitor be added, such as Tool Cool (8 oz. to 1 gallon water or one tablespoon per tank).

Fill the coolant reservoir so that the lubricant fluid covers the bottom 1/4" of the blade (fig 6). Do not overfill the oil reservoir, as excess fluid will result in unnecessary spraying of fluid while sawing, possibly causing damage to the arbor bearings and motor. Once the lubricant has been added, position the cork gasket on top of the reservoir (fig 7) and reattach the saw table with the four mounting screws (fig 8).

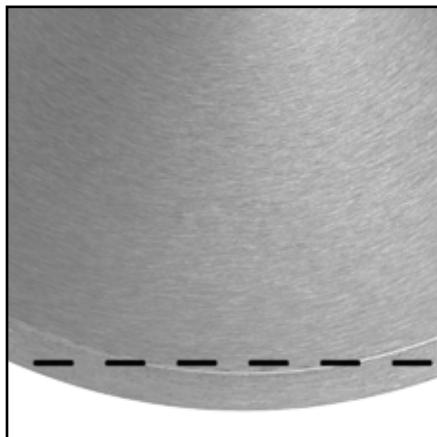


Fig 6 - Fill the coolant reservoir so that the lubricant fluid covers the bottom 1/4" of the blade

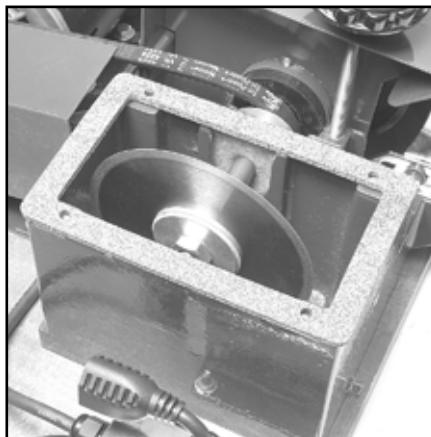


Fig 7 - Cork tank gasket in place prior to mounting saw table

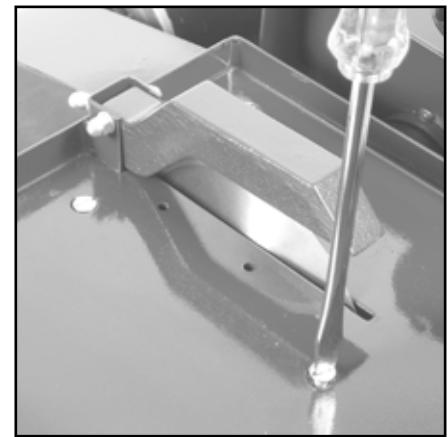


Fig 8 - Attach the saw table by installing and tightening the 4 flat head machine screws

ROCK VISE

A trim saw rock vise assembly (part number 8300015 - fig 9) is optional with the Cab Combination Workshop. This assembly is purchased separate from the unit as it does not come as standard equipment with the Cab Combo Workshop (diamond or carbide). The vise can be ordered as an assembly, ready to be installed on the trim saw table to enable the user to securely hold gemstone material while trimming to the desired thickness.

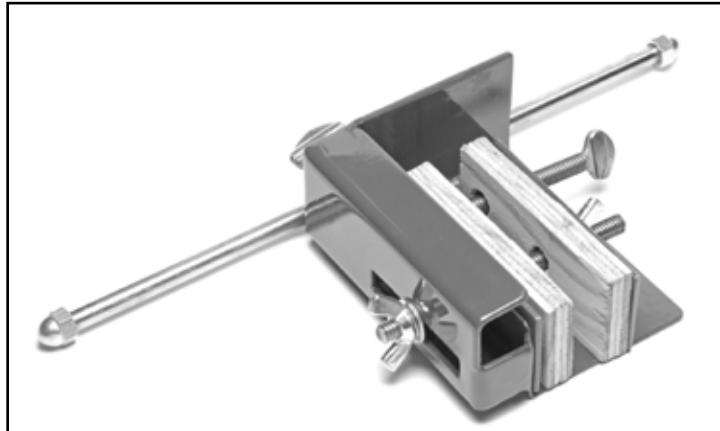


Fig 9 - Trim saw rock vise

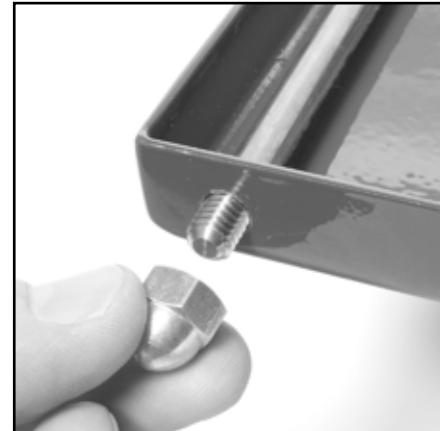


Fig 10 - Rear acorn nut being fastened to the 5/16" sliding rod

The rock vise assembly comes with a 5/16" diameter stainless steel slider rod which fastens into the trim saw table top through two mounting holes. Once the vise is secured to the table with the two acorn nuts fastened to the 5/16" sliding rod (fig 10 & 11), the vise is ready for use. The jaws (metal and wood plates) are opened by loosening the wing nut studs (fig 12) and moving the jaws to the desired position to secure the material to be cut. The user can index the cross feed or adjust for parallel slab cuts to a desired gemstone thickness by loosening the cross feed lock on the back of the vise (fig 13) and turning the cross feed thumb screw on the left side of the vise (fig 13) to the desired position. User should periodically lubricate the slider rod by smearing a small amount of wheel-bearing grease on the surface of the rod.

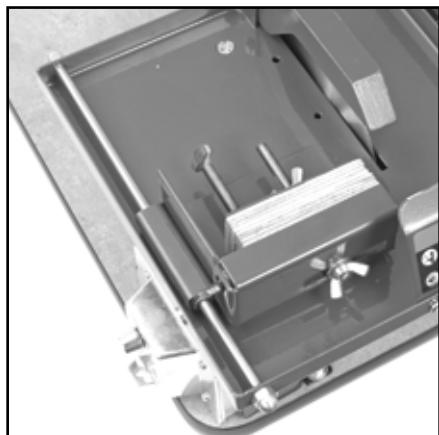


Fig 11 - Rock vise secured to saw table

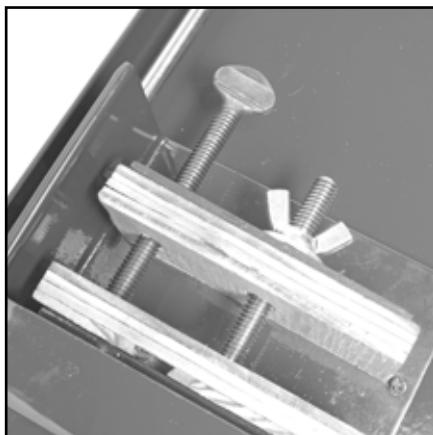


Fig 12 - Wing nut studs



Fig 13 - Cross feed lock (right) and cross feed thumb screw (left)

PRE-START

Remove the belt guard and check to see that the belt is properly tensioned. Finger tip pressure on the belt (halfway between the motor and drive shaft pulleys) should show approximately 1/2" of belt deflection (fig 14). If the belt requires adjustment, loosen the motor mounting bolts and move the motor slightly toward the saw to decrease belt tension or away from the saw to increase belt tension. Tighten the motor mount bolt and recheck the belt tension. When the belt is properly tensioned, check that all motor mount bolts are securely tightened and replace the belt guard.

Check all 4 motor mount bolts (fig 15), motor arbor pulley setscrew (fig 16), blade/wheel shaft pulley setscrew (fig 17), belt guard mounting nuts and saw table mounting machine screws to make sure they are tight.

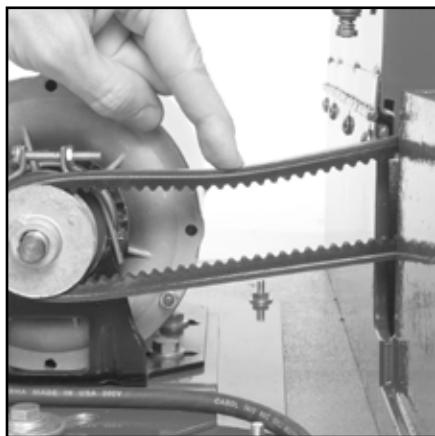


Fig 14 - Checking belt deflection

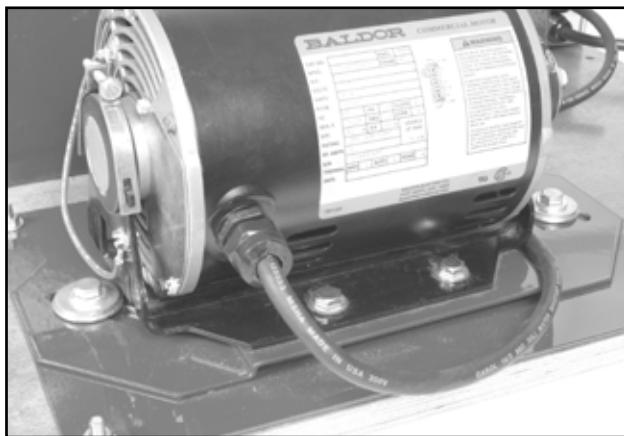


Fig 15 - Motor mount bolts (one on either side of the motor and two under the rear of the motor)

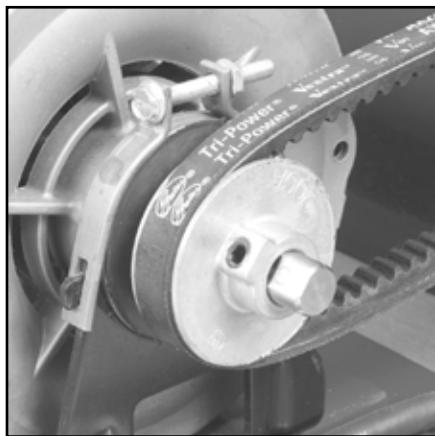


Fig 16 - Motor arbor pulley

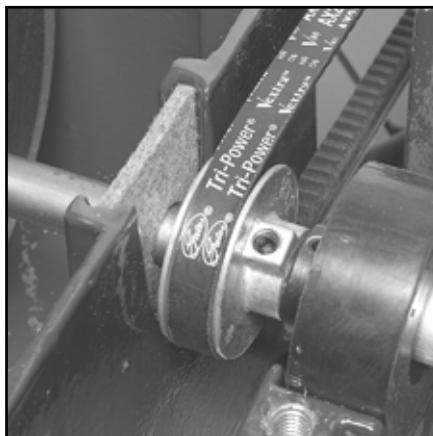


Fig 17 - Blade/wheel shaft pulley

START-UP

Place the Cab Combo Workshop on a strong flat table or bench. A power test can now be conducted to make sure the motor is operating and all moving wheels and blades are correctly aligned and secured to the main shaft. Plug the enclosed Ground Fault Circuit Interrupter (GFCI) Switch into a 110 to 120 volt 60 Hz minimum 15-amp circuit wall outlet (fig 18).

If needed, plug an extension cord into the GFCI. If an extension cord is used, use one that is at least 14-gauge wire and no longer than 25 feet. The Cab Combo Workshop power cord is attached to the ON/OFF switch box on the left side of the unit. Make sure the switch box lever is in the OFF (fig 19) position before plugging into the GFCI or extension cord.

To energize and test the GFCI, push the RESET button (fig 20) on the switch and a red window will appear to indicate the switch is energized. If the TEST button is pushed, the switch will click off indicating the GFCI is functioning correctly.



Fig 18 - GFCI

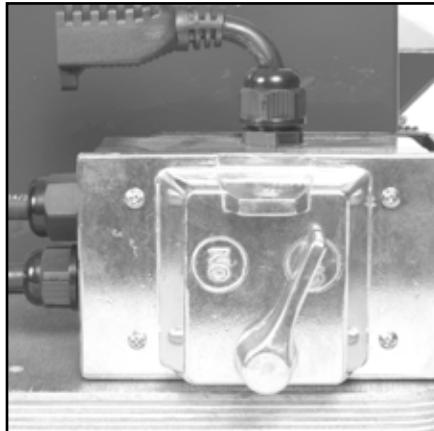


Fig 19 - Power switch in the OFF position



Fig 20 - GFCI reset button

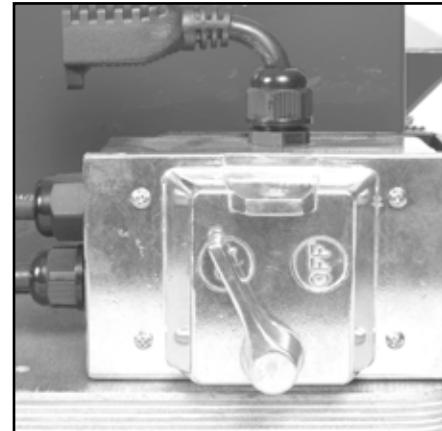


Fig 21 - Power switch in the ON position

The Cab Combo Workshop is now ready for a power up test to be performed. Turn the lever to the ON position (fig 21) on the switch box. Make sure no unusual sounds or vibrations occur when the motor engages. If the shaft or motor pulley should loosen, they may hit the sides of the saw tank, hood, motor or belt guard causing a rubbing noise. If this happens, shut off the unit, unplug the power cord from the switch box and adjust, align, and securely retighten the pulleys with an Allen wrench. Liquid thread locker (removable type) can be used on the setscrew threads to prevent loosening.

PUMP SET-UP

A submersible electric water pump is used to supply water to the polishing wheels as coolant and lubricant. The pump has a flow control adjustment on one side and should be adjusted for maximum water intake (fig 23). It is recommended that a 5 gallon bucket be used as a water reservoir into which the submersible pump should be placed. The level of the reservoir water should be monitored so that water pump always remains fully submerged.



Fig 22 - Pump inlet adjustment set to minimum flow



Fig 23 - Pump inlet adjustment set to maximum flow



Fig 24 - Water pump hose attached to pump outlet

Connect the pump to the brass ON/OFF barbed lever valve at the rear of the hood with the included 1/4" ID water hose. Insert one end of the 1/4" ID water hose over the water pump outlet (fig 24) and the other end over the barbed end of the water control lever valve inlet (fig 25).

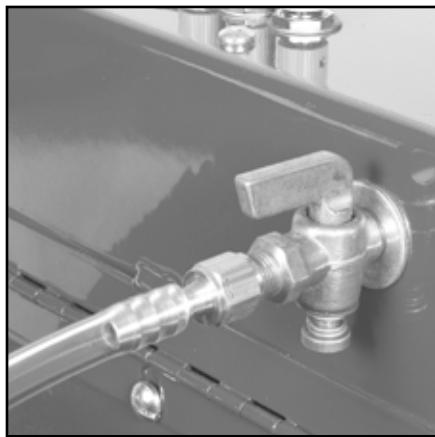


Fig 25 - Water control inlet valve with valve in the open position

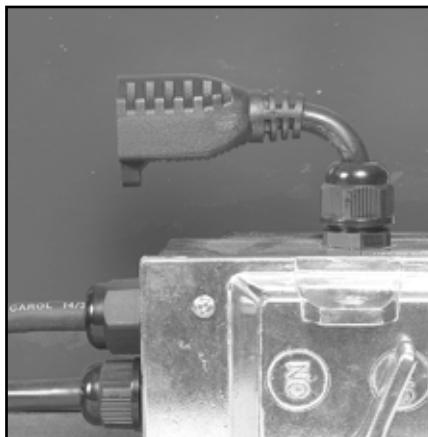


Fig 26 - Electrical outlet for water pump

The pump can be plugged into the female receptacle plug accessory attached to the main switch box (fig 26) when using the Cab Combo Workshop. Power to run the pump will occur once the switch box lever is placed in the ON position. The pump should be operated in maximum flow setting. This will allow sufficient water to reach the brass valve inlet on the rear of the hood to provide water to each of the three needle valve knob controlled water tubes to each of the three work stations.

PUMP SET-UP

Keep the water hose away from the electric motor and belt guard to prevent damage from moving parts and electric shock hazard. The pump should always be used with clear, clean water so as to avoid grit/abrasive material or rock fragments from scratching the gemstones during polishing. For optimal water flow, adjust both the pump and the brass intake valve to their fully open positions. Should less water be desired, turn the brass lever on the inlet valve to restrict flow to the hood (fig 25).

NEEDLE VALVES

The three stainless needle valves (fig 27) are for fine control of water to each of the three grinding and polishing stations. For best results, close the valves to the stations not in use. To shut off flow to a needle valve, simply turn the grey ribbed knob clockwise until it closes to a firm stop (do not overtighten). To open maximum flow to a needle valve, simply turn the grey ribbed knob counterclockwise until the valve stops.

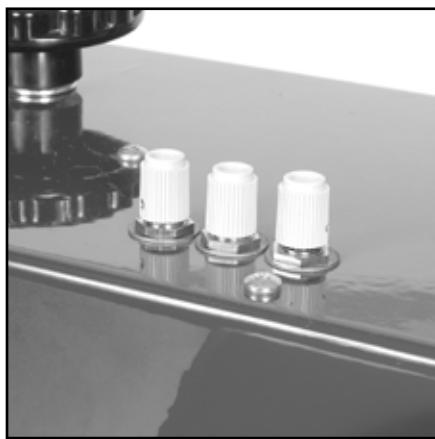


Fig 27 - The three stainless needle valves

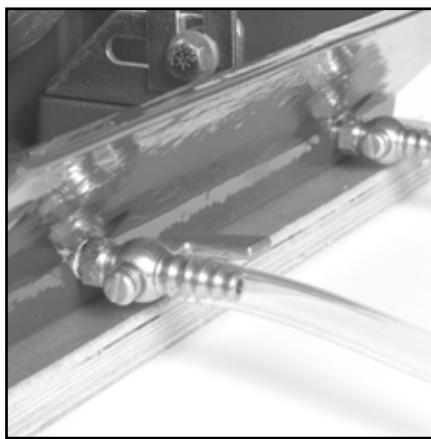


Fig 28 - Drain valves in the open position

DRAIN VALVES

A length of 3/8" ID tubing is provided with the Cab Combo Workshop for drainage of excess water from the front base of the reservoir where the two drain valves are located within the reservoir base (fig 28).

To drain off the excess build-up of cooling water on the diamond wheels and expandable drum belts, connect length of 3/8" ID clear tubing to each drain valve (fig 28) and route them into a 5 gallon collection bucket for dirty water.

Do not recycle dirty water from the drain valves into a collection bucket for pumping back up to the intake valve on the rear of the hood as the contaminants (rock grit, slurry and abrasive particles) will likely scratch the gemstone material being worked and possibly clog the stainless steel water control valve.

TRIM SAWING

Trim saw cutting of rock material is best performed on material that is under 1/2" in thickness and less than 4" in length. The rock slab to be cut should rest firmly and flatly on the saw table in front of the blade prior to beginning a cut (fig 29). Cut the slab using light but firm pressure, letting the blade do the work without forcing the slab. Forcing the material into the blade may result in a damaged blade and possible injury to the user as well. Forcing may also stall the blade, overheat the motor, damage the belt and yield poorly sawed surfaces of the rock material.

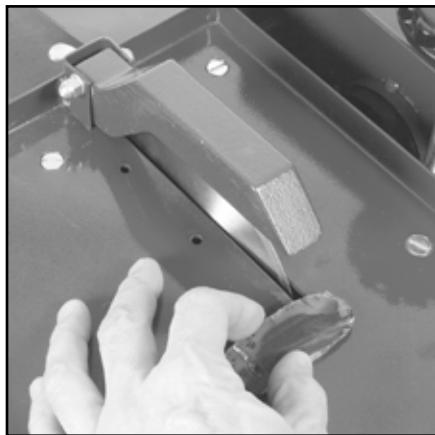


Fig 29 - Cutting material

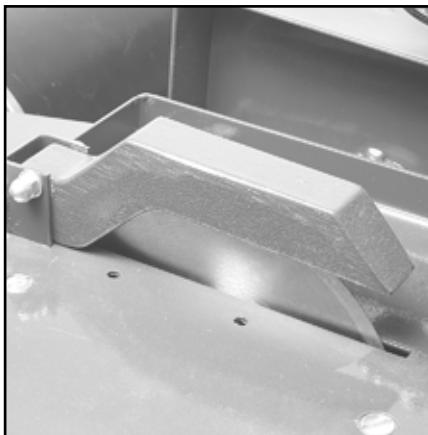


Fig 30 - Blade guard in operating position

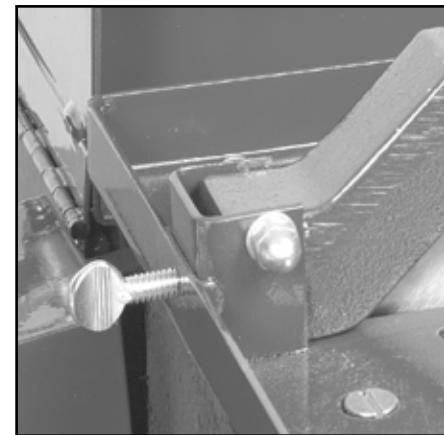


Fig 31 - Blade guard adjustment thumb screw

It is absolutely necessary that the user wear safety glasses while using the Cab Combo Workshop to prevent eye injury. It is highly recommended to use a combination of personal protective gear at all times such as face shield/safety glasses and a vinyl apron. Make sure the blade guard is in place and adjusted as low as possible (to minimize the spray of cutting solution during sawing) but still clears the top of the blade (fig 30). The height of the blade guard is adjusted with the guard thumbscrew (fig 31) at the rear of the blade guard.

Should the blade be damaged for any reason, do not use the Cab Combo Workshop until the blade is replaced. Continuous rim blades cannot be repaired if dished, kinked or damaged and should be replaced with a new blade immediately.

DIAMOND WHEELS

The Diamond Cab Combo Workshop comes equipped with two 6" OD x 1-1/2" wide brazed diamond wheels in two diamond abrasive grit sizes (80 and 200 grit). Both wheels are manufactured to a low tolerance OD circumference run-out for maximum wheel life and to prevent pounding and poor performance during grinding. The high temperature brazed diamond bond provides excellent abrasive performance when grinding the rough shape of the gemstone material. Diamond wheels must have an uninterrupted flow of water during use for proper cooling and flushing.

A tool rest is attached to the reservoir base of the Cab Combo Workshop in front of both the 80 and 200 grit diamond wheels (fig 32). If a dop-stick is being used to hold the gemstone material, the user can use the tool rest to securely hold the dop-stick while grinding, shaping and sanding. The tool rest

mount can be adjusted by loosening the positioning bolt (fig 33), moving the tool rest to the desired height and distance from the wheel, and then retightening the positioning bolt. The tool rest can also be completely removed (fig 34) from the Cab Combo Workshop if the operator desires.

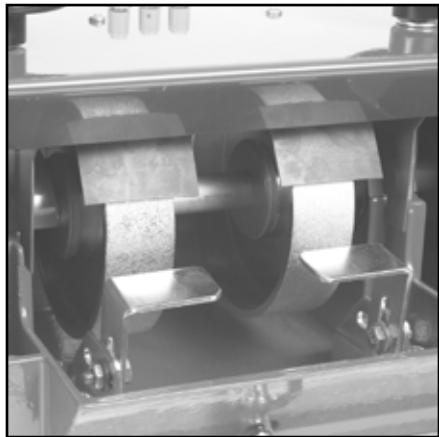


Fig 32 - Tool rests

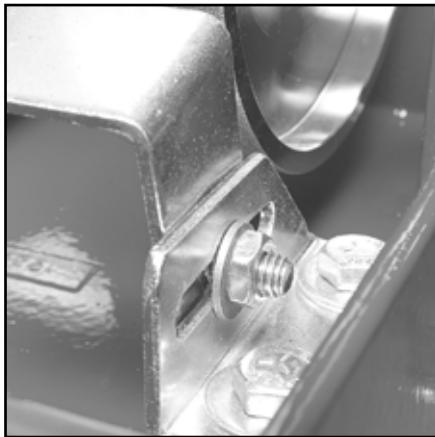


Fig 33 - Tool rest positioning bolt



Fig 34 - Grinding with tool rest removed

Rough shaping of the gemstone material should be performed first with the 80-grit wheel with maximum water flow from the hood mounted water control valve. It is recommended that you only pump clean water to the Cab Combo Workshop water system and never recycle your drain water back to your grinding wheels or expandable drum.

Due to the steel alloy construction and brazed nickel diamond bounding of both wheels, a "ringing" noise will be heard during grinding and sanding. This is normal and should be of no concern. Should coolant/flushing water flow be interrupted while grinding with the brazed diamond wheels, the diamond may "glaze over" or dull the diamond bond. The diamond bond can be "dressed open" or sharpened by taking the green carbide stick and lightly touching it to the diamond grinding face of the wheel while rotating (fig 35). Only apply a slight pressure - for no more than 2 seconds - with full flow of cooling water when "dressing open" the wheels. Do not oversharpen as the wheel life will be shortened.

Always ensure there is a clear, constant drip of water flowing off the rotating wheels into the reservoir tank. Additionally, don't force the gemstone material while grinding with the diamond wheel. Allow the diamond bond on the wheel to work smoothly with a constant and steady application of hand pressure. Rotate your gemstone while grinding to uniformly remove material, nicks and flat spots.

Remember, satisfactory results are dependent on the user's skill and experience, as well as the gemstone and equipment being used.



Fig 35 - Carbide stick applied to diamond wheel

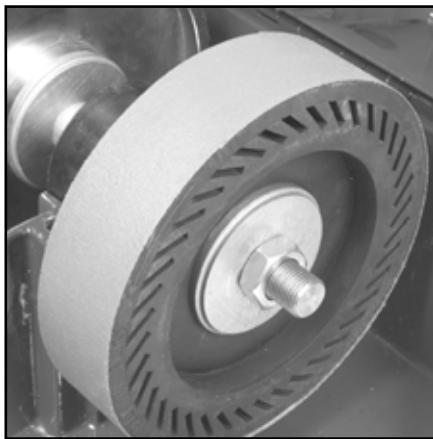


Fig 36 - Resin belt installed and centered on expandable drum

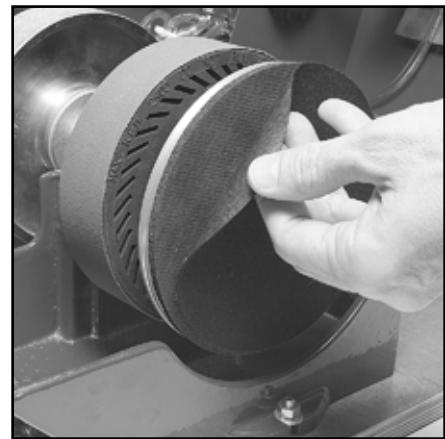


Fig 37 - Polytex pad being applied to the convex polishing disc

EXPANDABLE DRUM AND DIAMOND RESIN BELTS

The Cab Combo Workshop comes with four diamond resin belts (6" OD x 1-1/2" wide) in abrasive grit sizes: 400, 600, 1,200, and 3,000 (6 micron). These are to be placed over the edge and outer rim of the 6" x 1-1/2" rubber expandable drum (fig 36).

Be sure to center the diamond resin belt so that the width of the belt fits completely over the width of the rubber drum. Once the Cab Combo Workshop is turned on, the rotation of the shaft and rubber drum will cause the drum to expand outward, which will expand the rubber drum and tension the belt on the drum. It is to be expected that the diamond resin belts will slide somewhat sideways while sanding or polishing material. To safely and correctly use the belt, shut the unit off and reposition or realign the belt over the drum and restart the unit.

Under no circumstances should the belts be used dry, as the build-up of heat from the grinding friction with the gemstone material will cause the belts to wear out prematurely and possibly tear. Therefore, keep a constant stream of water from the needle water control valve on the top of the hood (far right valve) on at all times. Do not circulate dirty water from the reservoir tank or from a collection container back into the water valves or else contaminant abrasive particles may scratch the gemstone. Always pump from a clear and clean water reservoir to the diamond wheels and belts. For best results always dry the gemstone material and check for scratches before proceeding to the next wheel or belt diamond grit size. Do not skip belts in the four belt sequence (400, 600, 1,200, and 3,000 grit).

POLISHING WITH DIAMOND PASTE

The Cab Combo Workshop comes with three syringes (5 grams each) of diamond paste in abrasive grit sizes: 8,000, 14,000 and 50,000. These diamond pastes are to be used with the three 6" OD Polytex polishing pads with adhesive backing on the foam covered convex 6" end polishing disc. Once the gemstone material has been sanded and polished with the 3,000 grit (6 micron) diamond resin belt, remove the paper backing on the Polytex pad to expose the adhesive surface, placing it firmly without creases on the foam convex surface of the 6" end polishing disc on the right end side of the Cab Combo Workshop (fig 37).

POLISHING WITH DIAMOND PASTE

Lightly smear with your fingertip a small amount diamond paste on the center of the mounted Polytex pad with the unit operating and the polishing disc rotating. The diamond paste will evenly spread over the surface of the Polytex pad once polishing of the gemstone starts. Move the gemstone in a rocking and rotating motion from the center of the disc toward the outside edge.

Use only one dedicated Polytex polishing pad with each respective diamond paste syringe (i.e. keep a labeled Polytex pad for the 8,000 grit paste in a zip-lock bag labeled 8,000 grit). Do not use a single Polytex pad with two or more diamond pastes or else cross-contamination and poor polishing of the gemstone material may result.

The Polytex pad can be removed from the foam rubber covering of the convex polishing disc by slowly pulling the Polytex pad off the foam and placing it in a zip-lock plastic bag properly labeled with the syringe paste diamond grit size for future use. No water or extender fluid is needed to effectively disperse the diamond paste from the syringe on the Polytex pads. If the adhesive backing becomes weak with repeated use, you can apply a few drops of 3M On/Off cement to improve the adhesive connection to the foam disc.

POLISHING WITH THE LEATHER BUFF PAD

For final polished gemstone results, place the 6" cowhide leather pad (rough side out) on the foam polishing end disc using the 3M On/Off adhesive cement (red box) to hold the leather pad securely while buffing the gemstone in a rocking motion (fig 38 & 39). Only use a small amount (8 to 10 dabs) of 3M On/Off adhesive cement on the smooth cowhide surface, smearing it uniformly before placing it over the foam rubber on the polishing disc. When the final polish finish of your gemstone has been achieved, remove the leather disc and place it in a zip-lock bag for future use. It is not necessary to use any polishing media or liquid (water) when buffing the gemstone with the leather disc. Be sure to firmly grip the gemstone by hand or with a dop-stick (wood dowel or aluminum rod) cemented or epoxied to the back of the gemstone while using the leather buff pad.

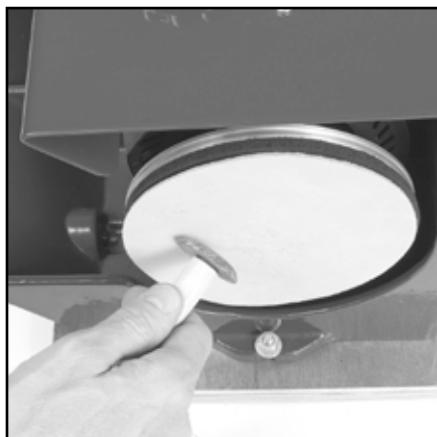


Fig 38



Fig 39

DIAMOND WHEEL REPLACEMENT

When worn-out, the diamond wheels and expandable drum can be removed and replaced.

1. Remove the belt guard from motor mount (fig 40).
2. Loosen the motor mount nuts, sliding the motor toward the saw so that the belt can be removed from the motor pulley (fig 41).
3. Remove the 4 flat-head screws that secure the saw table (fig 42) and remove the saw table from the coolant tank (fig 43).
4. Remove the blade from the arbor shaft.
5. Unscrew and remove the locking knobs from the hood (fig 44).
6. Slide the motor away from the Cab Combo Workshop and rotate the hood back (fig 45) to expose the shaft assembly.
7. Hold the expandable drum in one hand to keep the shaft assembly stationary and with the other hand remove the polishing hub by rotating it counter-clockwise (fig 46).
8. Hold the expandable drum in one hand to keep the shaft assembly stationary and with an adjustable or box wrench, remove the jam nut on the right end of the unit by turning it counter-clockwise (fig 47).
9. Lift the shaft assembly out of the bearing seats (fig 48).
10. Loosen the set screw that secures the right-side bearing collar (fig 49) and slide the bearing off the shaft. If the set screw has scarred the shaft, it may be necessary to file the burr off the shaft with a small, fine flat file or piece of emery paper.
11. Remove the diamond wheels and spacers from the shaft.
12. There is no need when replacing the diamond wheels to loosen or remove the left-side bearing collar and bearing.

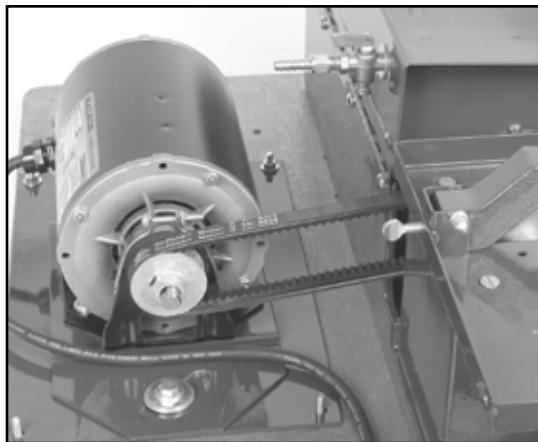


Fig 40 - Remove belt guard from motor mount.

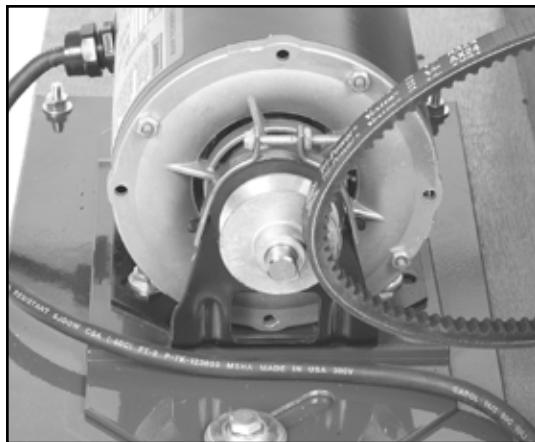


Fig 41 - Remove belt from motor pulley

DIAMOND WHEEL REPLACEMENT

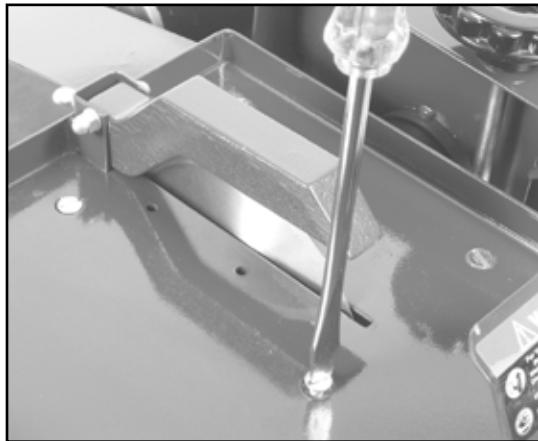


Fig 42 - Remove machine screws from table

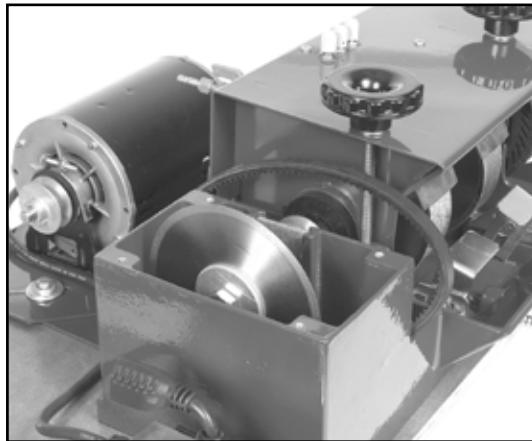


Fig 43 - Remove saw table from coolant Tank

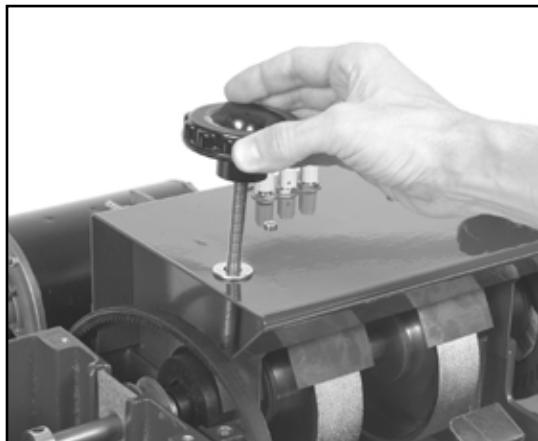


Fig 44 - Remove the locking knobs

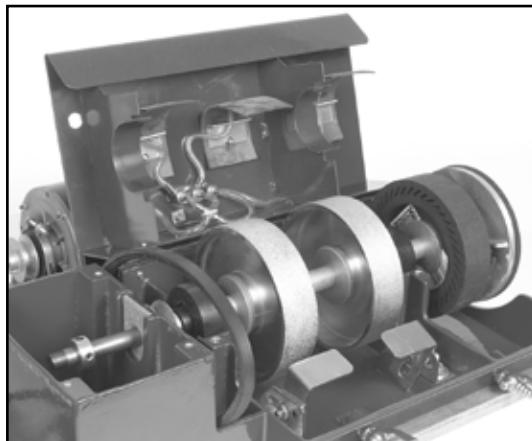


Fig 45 - Cab Combo Workshop with hood rotated back

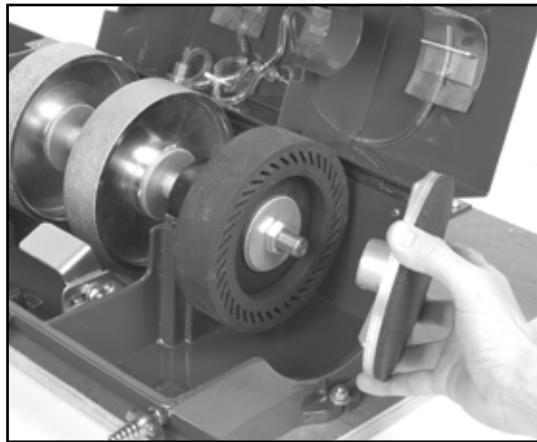


Fig 46 - Remove polishing hub from shaft

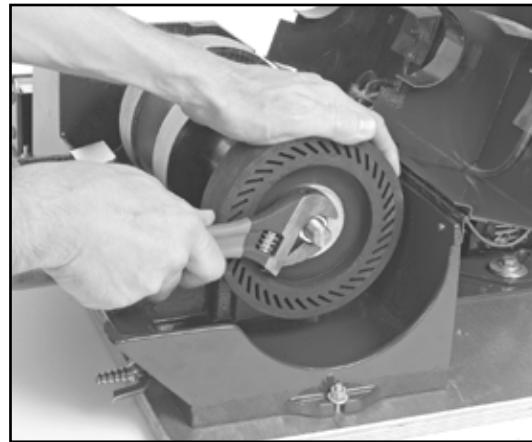


Fig 47 - Remove the jam nut

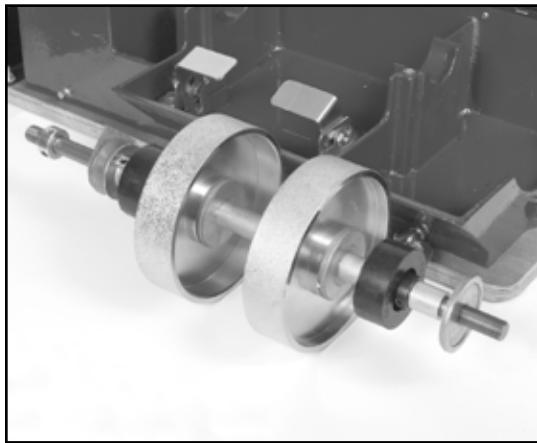


Fig 48 - Shaft assembly removed from Cab Combo Workshop

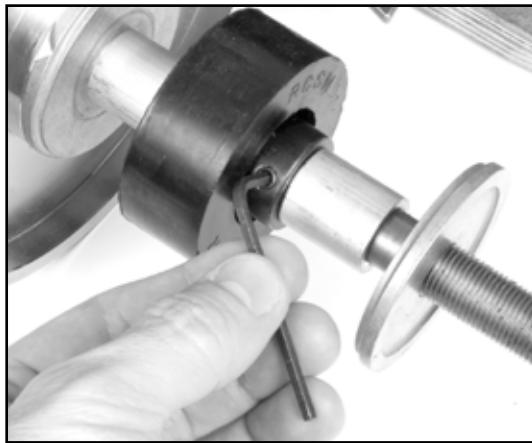


Fig 49 - Loosen the set screw that secures the right-side bearing collar

SHAFT REASSEMBLY

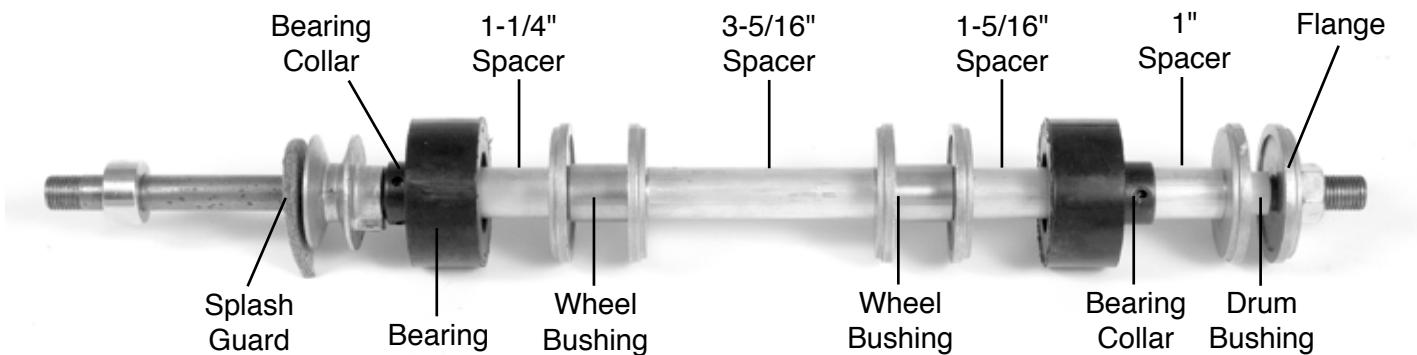


Fig 50 - Diamond wheel shaft assembly (shown without diamond wheels and polishing drum)

Reassembly of the shaft with the new diamond wheels is the reverse of the disassembly instructions. Please keep the following points in mind when reassembling:

1. Install diamond wheels with the inside faces facing each other (fig 51 & 52). Be sure the diamond wheel bushings are installed (fig 50).
2. The bearings have a permanently mounted bushing that extend from one side of the center bearing. This extension must face away from the diamond wheels (fig 53 & 54) on both ends of the arbor shaft.
3. The arbor shaft collars have one recessed side and one flat side (fig 55 & 56). The recessed side should face the bearing and mate against the extended portion of the bearing bushing.
4. There should be a flange installed on both sides of each diamond wheel and the expandable drum. Make sure the concave side of the flange (fig 4) faces the wheels and drum.
5. When tightening the set screw in the right side bearing collar, stand the arbor shaft up on end (blade end of the shaft on the floor) and push down with a light to medium pressure on the bearing collar. This will provide enough compression between the shaft components so that the diamond wheels and expandable drum do not become disengaged from the shaft during grinding and polishing operations.

6. When installing the shaft assembly back in the Cab Combo Workshop, make sure the rubber mounted bearings are centered in the bearing seat (fig 57 & 58). If the left bearing is centered in the bearing seat and the right bearing is not properly centered, make sure the aluminum spacers are in the correct order and that the bearings and arbor collars are properly installed.
7. Install the sanding drum with arrow of rotation facing direction of rotation (fig 59).
8. Make sure diamond wheel and drum bushings are installed.
9. Make sure the coolant splash guard is installed properly (fig 60).



Fig 51 - Outside face of diamond wheel



Fig 52 - Inside face of diamond wheel

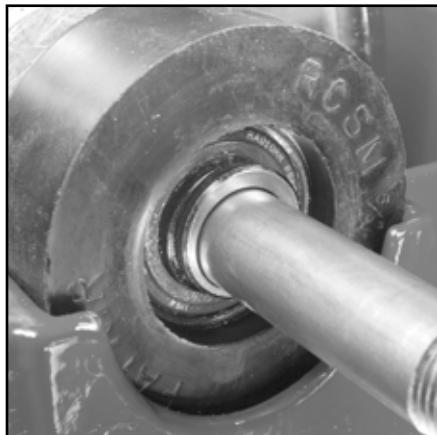


Fig 53 - Bearing correctly installed

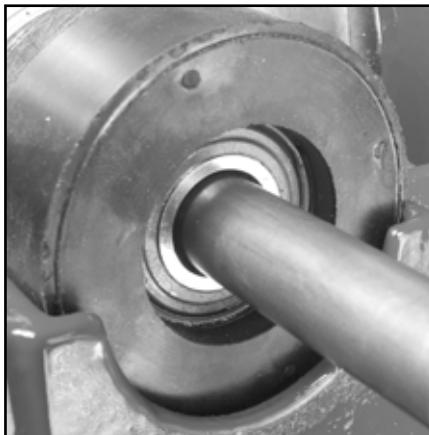


Fig 54 - Bearing incorrectly installed

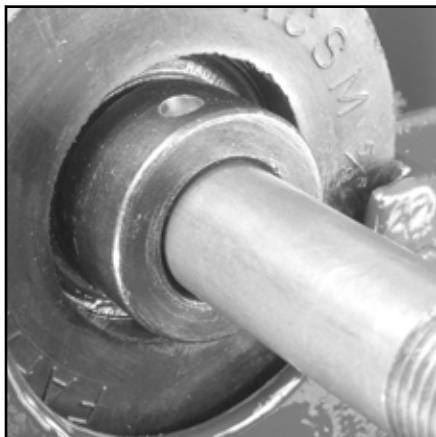
SHAFT REASSEMBLY

Fig 55 - Bearing collar correctly installed

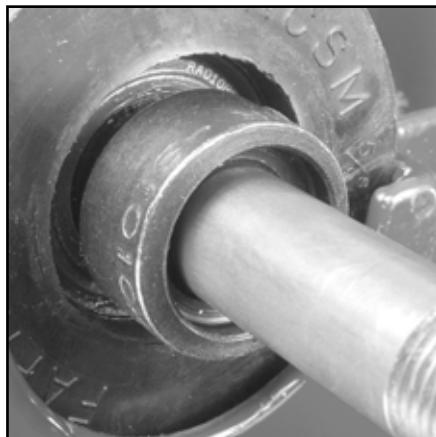


Fig 56 - Bearing collar incorrectly installed

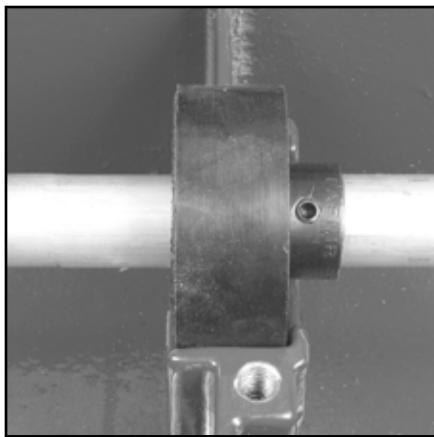


Fig 57 - Bearing correctly seated

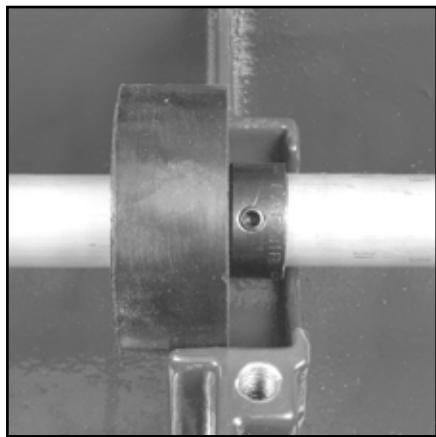


Fig 58 - Bearing incorrectly seated



Fig 59 - Arrow on drum indicates direction of rotation

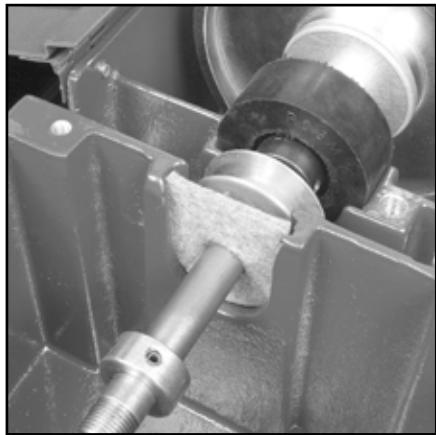


Fig 60 - Coolant splash guard installed

COOLANT REPLACEMENT

The trim saw tank on the Cab Combo Workshop requires periodic routine maintenance to remove and properly discard the build-up of rock mud, sludge and dirty lubricating fluid (oil) from the oil tank reservoir. It will be apparent to the user after prolonged sawing that the lubricating fluid is dirty and needs to be changed if the oil residue on the saw table (after cutting) is thick and dark with rock sludge build-up.

The oil liquid can be removed rapidly by removing the square-head drain plug attached to the bottom drain hole at the base of the coolant reservoir (fig 61). The oil should be collected in a container and either reused or properly disposed of.

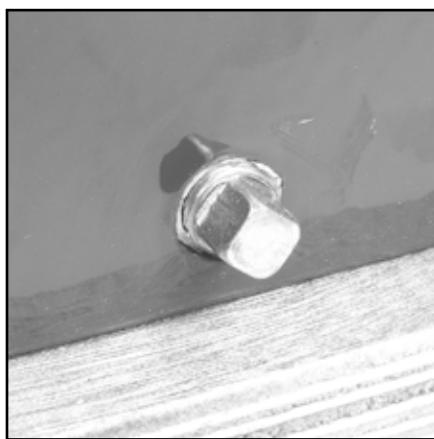


Fig 61 - Drain plug

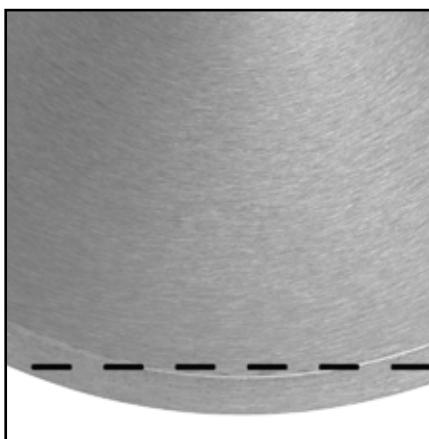


Fig 62 - Refill the cutting lubricant reservoir to cover 1/4" of the bottom edge of the blade

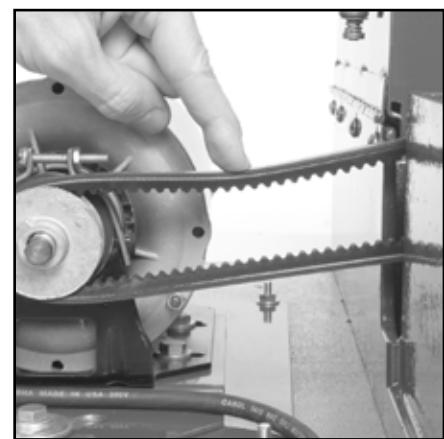


Fig 63 - Check belt deflection

To prevent the overflow of oil and rock sludge onto the baseboard or floor, use a bucket or collection container placed under the baseboard to allow the free flow of oil and sludge into the bucket for proper disposal. The thicker solid sludge residue in the tank will likely not flow through the 1/4" diameter drain hole. Therefore the sludge should be removed after the slab saw oil lubricant is drained, by removing the saw tabletop and extracting the sludge with a spatula or spoon.

Once the sludge is removed, wipe the inside of the tank with disposable towels and refill the cutting lubricant to cover 1/4" of the bottom edge of the blade (fig 62). The diamond blade should be removed from the arbor shaft while removing the sludge. Be sure to check the coolant level inside of the reservoir after every 3 to 5 hours of use as the fluid will absorb onto the rock material and will be reduced over time due to heat and evaporation.

BELT

The Cab Combo Workshop arbor is driven from the electric motor by a AX-24 rubber belt. The Belt tension is adjusted at the factory. However, if it is necessary to service this belt, unplug the Cab Combo Workshop from its power source and remove the fasteners that secure the belt guard housing to the motor. The belt tension should be checked periodically by removing the guard and depressing the belt in the middle between both the motor and blade arbor 2" OD pulleys. There should be 1/2" of

deflection when the belt is pushed down (fig 63). If the belt tension should become loose, poor sawing performance or slipping will result. If the belt is too tight (i.e. no deflection) the belt, electric motor, pulleys and blade arbor bearings may wear out prematurely or the motor may overheat and shut off. Belt tension can be adjusted by loosening the two mounting bolts attached to the base of the motor mount and sliding the motor cradle base forward or backward to increase or decrease belt tension. Be sure to adequately retighten the motor mount nuts and replace and attach the belt guard to the table as well.

BLADE ARBOR ASSEMBLY AND PULLEYS

The Cab Combo Workshop is equipped with a 5/8" OD arbor shaft with 2" OD x 5/8" bore aluminum flanges and spacers, two rubber sealed ball bearings, felt gasket and 2" OD x 5/8" bore die cast zinc coated pulley. Should the bearings wear out on the arbor shaft, poor sawing, grinding and polishing performance and overheating may result causing permanent damage to the shaft, bearings, belt and motor. This main stainless steel shaft arbor assembly can be purchased from Barranca Diamond as a complete unit. Periodically check the tightness of the hood attachment knobs (fig 64) to make sure they are securely tightened to the aluminum body of the Cab Combo Workshop. Should the 2" OD die cast pulleys on either the motor (fig 65) or blade arbor shaft need to be removed or replaced, loosen the setscrew on the hub of each pulley with a US standard Allen type wrench. The setscrews can be secured with liquid thread locker (removable type) to prevent loosening due to vibration.

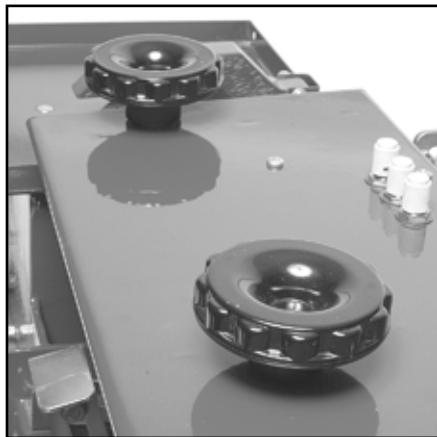


Fig 64 - Hood attachment knobs.



Fig 65 - Motor arbor shaft pulley.

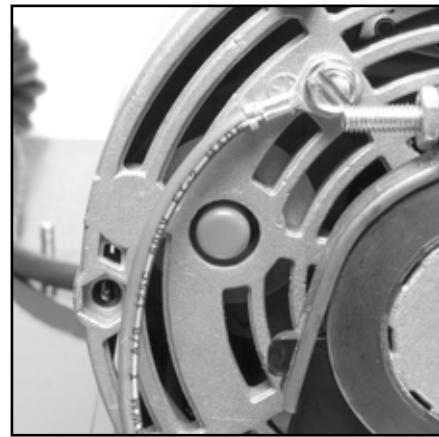


Fig 66 - Motor reset button.

ELECTRIC MOTOR

The Cab Combo Workshop is equipped with a 1/3 HP 1725 RPM single-phase 120 volt 60 Hz 8 amp motor. The motor shaft has sealed ball bearings and requires no lubrication. The motor is protected from thermal damage (overheating) with an automatic shut-off switch. If the motor overheats it will automatically shut off and restart once its internal components cool down and the motor is restarted manually (red button). Be sure to shut off the main motor by placing the switch lever to the OFF position and disconnecting the power source. After allowing the motor to cool (2 to 3 hours), push the red reset button on the side of the motor (fig. 66) and restart the unit by turning the switch to ON. If the motor does not restart after a cool down period, remove the motor and have an authorized repair service center inspect the motor. Barranca Diamond can refer you to an authorized motor repair service center in your area.

Please note: On Cab Combo Workshops prior to serial number 850, the motors do not have a reset switch. Therefore it is imperative that if the saw motor should stop during operation that the power to the main motor be shut off by placing the toggle switch in the MIDDLE/OFF position as the motor will restart automatically once cooled down.

DIAMOND BLADE

Periodically, the diamond blade on the Cab Combo Workshop will need to be sharpened or replaced. A dull or "glazed over" diamond blade can stall and cause the motor to shut off and possibly damage the blade or "dish" the core. Once the saw begins to labor or struggle to cut, try using a sharpening stick (green or white silicon carbide material, 60 to 100 grit size) on the blade.

If no sharpening stick is available, use an abrasive material such as cinder block or brick to remove the glazing over the diamonds on the edge of the blade. Do not oversharpen the blade.

Eventually all diamond blades wear out and must be replaced. New continuous rim diamond blades (303 Pro) should be mounted on the blade arbor so that the arrow marked on the steel core is pointing in the direction of blade rotation. If the arrow cannot be found, use a hand lens or magnifying glass on the blade edge, find the head and tail of any diamond and orient with the tail trailing behind. For notched rim diamond blades (297 or 301 models), it does not matter which way the blade is orientated on the arbor shaft.

SUBMERSIBLE PUMP

Periodically remove the plastic inlet cover on the submersible water pump (fig 67 & 68). Remove the filter element (fig 69) and clean any obstructions such as sludge or rock mud that may be found. Clean the filter with warm, soapy water. Replace the filter (fig 70 & 71) and test the pump to ensure it's functioning properly.



Fig 67 - Water Pump

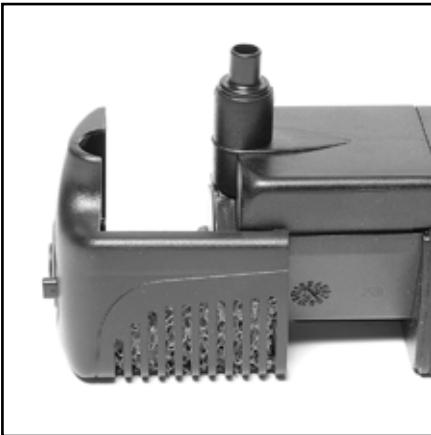


Fig 68 - Slide pump inlet cover off the pump body



Fig 69 - Slide the filter element out the back of the inlet cover

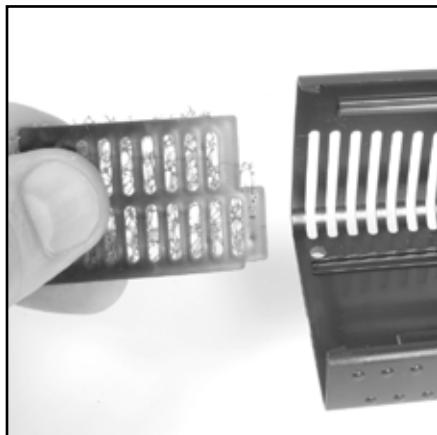


Fig 70 - Replace clean filter


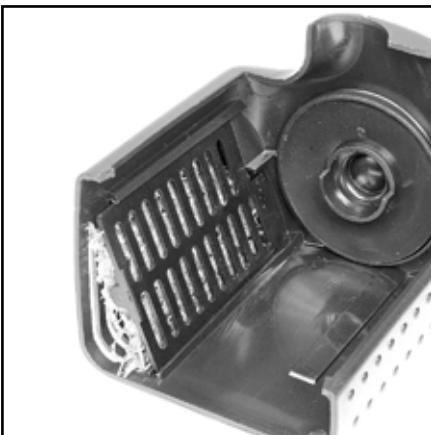


Fig 71

NOTES

CAB COMBO CARBIDE P/N 8300011

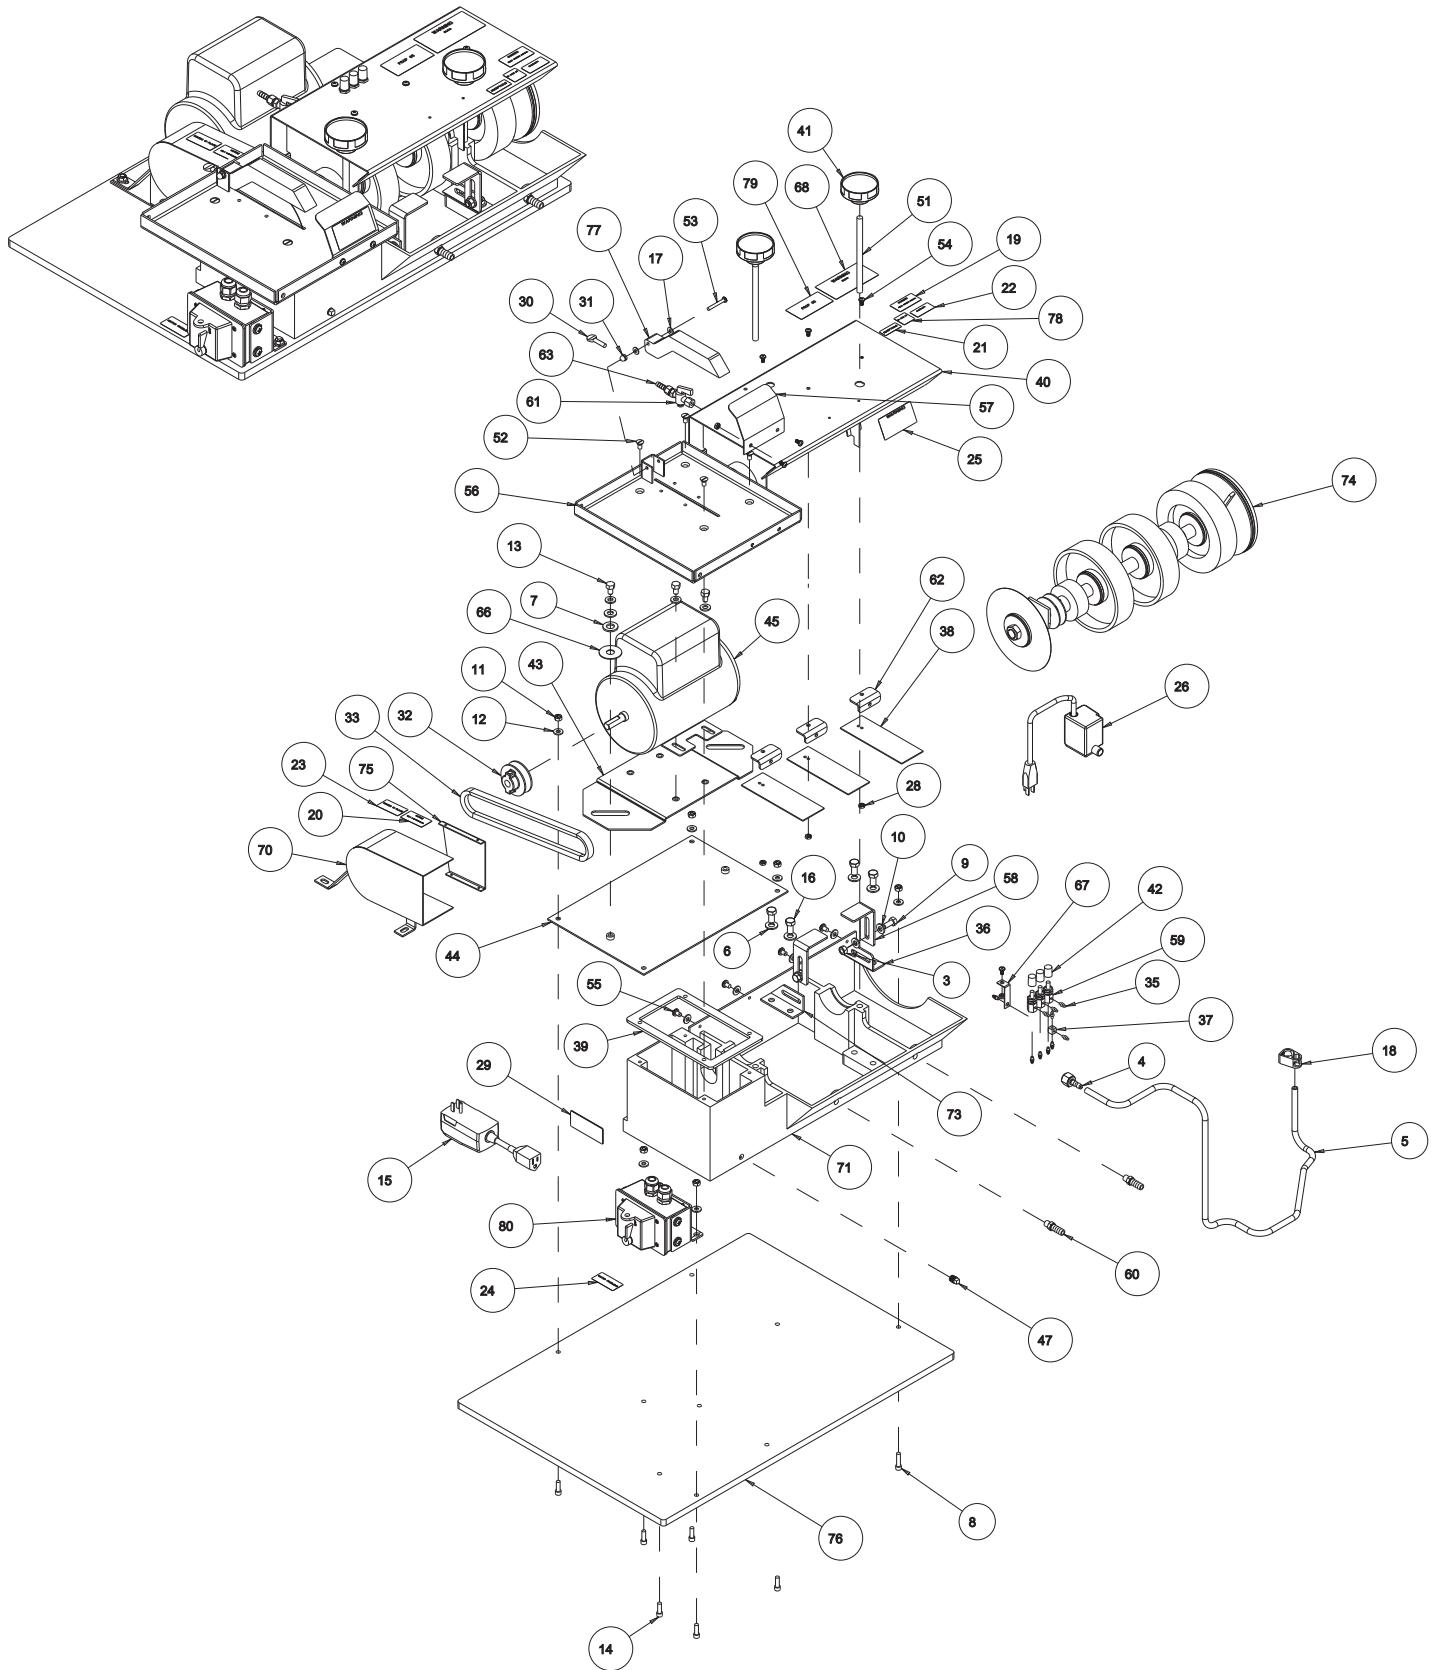

CAB COMBO CARBIDE P/N 8300011

Item	Description	Part #	Qty
1	PAD, POLISHING 6" POLYTEX	14615	3
2	PAD, POLISHING 6" LEATHER	14617	1
3	NUT, HEX, 5/16-18	101196	2
4	ADAPTER, PUMP TPF-22 1/4X1/4	128397	1
5	HOSE, VINYL, 1/4X3/8 TSAW (3.5FT.)	132951	1
6	WASHER, FLAT, SAE, 3/8	150923	6
7	WASHER, 1/2 SAE FLAT	150924	2
8	SCREW, SOC HD CAP, 1/4-20 X 1	151049	1
9	SCREW, HEX HD, CAP, 5/16-18 X 3/4	151369	2
10	WASHER,FLAT,SAE,5/16	151754	10
11	NUT,HEX,1/4-20	151893	7
12	WASHER,FLAT,SAE,1/4	151915	11
13	SCREW, 5/16-18 X 1 1/2 HEX HEAD MACHINE	152473	6
14	SCREW, 1/4-20 X 3/4 SOCKET HEAD CAP	152587	6
15	GFCI, 120V, 15A	152610	1
16	SCREW, HEX, 3/8-16 X 3/4	153527	4
17	WASHER,FLAT,SAE,#10	154369	2
18	CLAMP,HOSE,1/4-1/2 FLOW	154394	1
19	LABEL,WARNING,READ MANUAL	154398	1
20	LABEL, NOTICE, OVERTENSION	154399	1
21	LABEL, CAUTION, RECEPTACLE	154822	1
22	LABEL, INFORMATION ON SERVICE	155038	1
23	LABEL, CAUTION, GUARDS IN PLACE	155587	1
24	LABEL, NOTICE, MOTOR PROBLEMS	155672	1
25	LABEL,WARNING, TILESAW SAFETY	155806	1
26	PUMP, WATER 115V, 60HZ	155987-VP	1
27	HOSE, WATER VINYL 3/8 X 1/2	156039	1
28	NUT, HEX 10-32	156269	6
29	TAG, SERIAL NUMBER, BLANK	157500-RW	1
30	SCREW, 1/4-20X1 SHOULDER THUMB	160461	1
31	NUT, 10-32	161040	1
32	PULLEY, 1A20 X 1/2 BORE	161070	1
33	BELT, MICRO-V AX-24	161085	1
34	FEATHERING DISC ADHESIVE	161323	1
35	BARB FITTING 1/8 NPTF	161343	10
36	BRACKET, TOOL REST LH	161442	1
37	CROSS, #10-32	161532	1
38	FLAP, WHEEL	161557	3
39	GASKET, TANK	161566	1


CAB COMBO CARBIDE P/N 8300011

Item	Description	Part #	Qty
40	HOOD WELDMENT	161629	1
41	KNOB, 2-1/2 DIA X 3/8-16	161651	2
42	KNOB, RIDGED, GRAY	161652	3
43	TOP, MOTOR MOUNT	161668	1
44	BOTTOM, MOTOR MOUNT	161669	1
45	MTR, .33HP 115/230V 60HZ 1PH	161672	1
46	OIL, TOOL COOL, 8 OZ.	161729	1
47	PLUG, PIPE 1/8"	161763	1
48	POLISHING COMPOUND, 01 MICRON	161766	1
49	POLISHING COMPOUND, 02 MICRON	161767	1
50	POLISHING COMPOUND, 2-4 MICRON	161768	1
51	ROD, THREADED 3/8-16 X 6"LG.	161829	2
52	SCREW, 1/4-20 X 3/4 FLAT HEAD PHILLIPS MACHINE	161856	4
53	SCREW, 10-32 X 1-1/2 PAN HEAD SLOT MACHINE	161874	1
54	SCREW, PAN HEAD PHILLIPS 10-32 X 3/8"	161875	6
55	SCREW, 1/4-20 X 3/8 PAN HEAD PHILLIPS MACHINE	161877	4
56	TABLE, WELDMENT	161964	1
57	GUARD, SPLASH	161965	1
58	TOOL REST, CAB COMBO	161974	2
59	VALVE, NV2SV-B, 10/32F	161989	3
60	FITTING, 1/8 MNPT X 3/8 BARB	161991	2
61	VALVE, 1/8NPTFM X 1/4 TUBE	161992	1
62	BRACKET, HOSE MOUNT	162154	3
63	ADAPTOR, MALE PIPE 1/8 NPTF	162315	1
64	TUBING, CLEAR PVC, 1/8 X 1/4 (36")	162505	1
65	TIE, NYLON .10 X 4.0	162506	1
66	WASHER, FLAT LARGE I.D. 1/2"	162510	2
67	CLIP, HOSE RETAINER	162511	1
68	LABEL, WARNING, SILICA, PROP 65	164202	1
69	OWNERS MANUAL, CAB COMBO	164271	1
70	GUARD, BELT	164578	1
71	TANK, CASTING MACHINED	166064	1
72	BOX, SHIPPING, CAB COMBO	166216	1
73	BRACKET, TOOL REST RH	166439	1
74	ASSY,SHAFT/WHEELS,6" CARBIDE	166608-C	1
75	GUARD, INNER BELT	167860	1
76	BOARD, BASE	168706	1

CAB COMBO CARBIDE P/N 8300011

Item	Description	Part #	Qty
77	GUARD, BLADE, COMP	169749	1
78	LABEL, QR CODE BD MANUALS	171239	1
79	LABEL, WARNING, PROP 65, EQUIPMENT & COMPONENTS	172641	1
80	ASSY, SWITCH BOX, 30A, GP	172836-18	1
81	BELT, 6 X 1.5 DIAMOND 400 MESH	390401	1
82	BELT, 6 X 1.5 DIAMOND 600 MESH	390601	1
83	BELT, 6 X 1.5 DIAMOND 1200 MESH	391200	1
84	BELT, 6 X 1.5 DIAMOND 3000 MESH	393000	1

CAB COMBO DIAMOND P/N 8300012

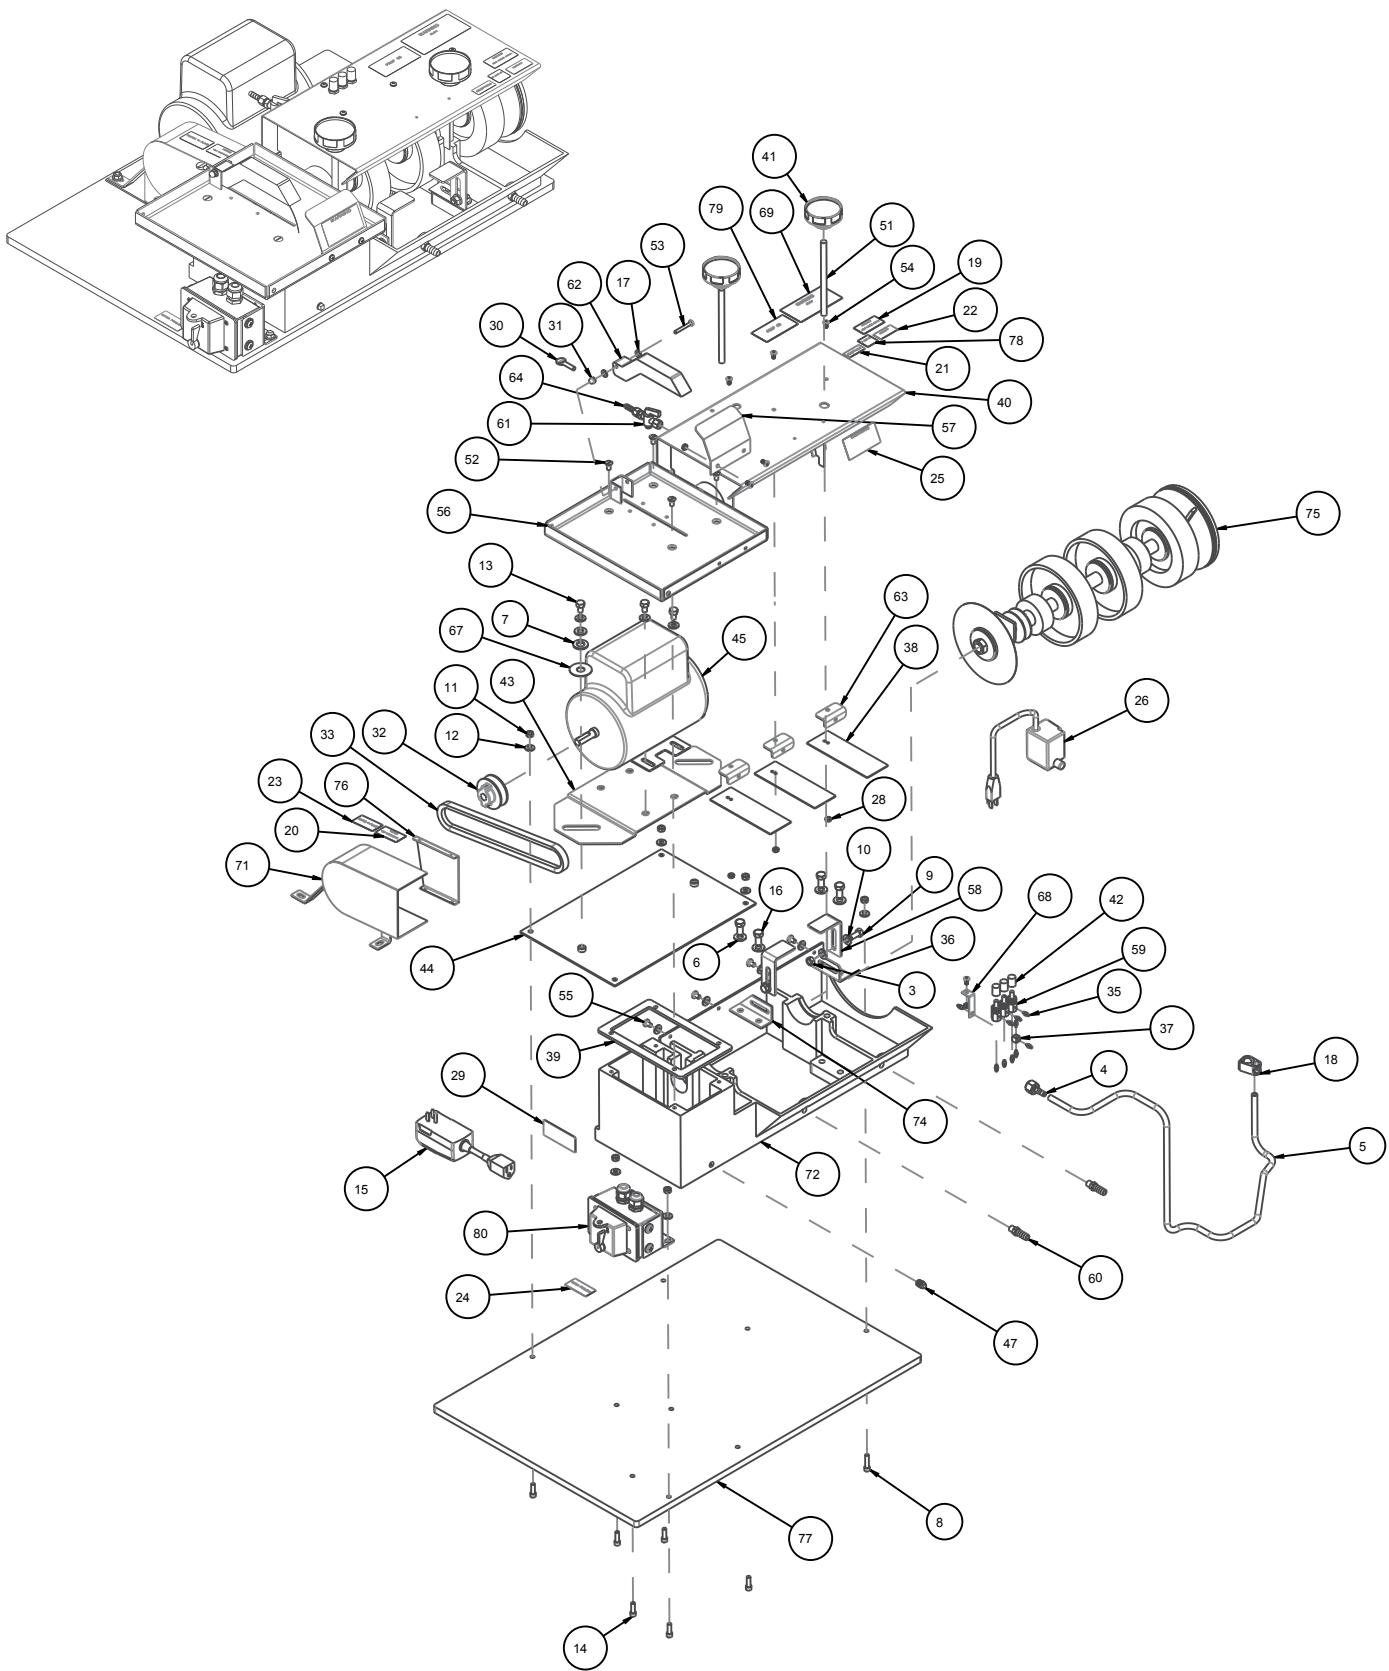

CAB COMBO DIAMOND P/N 8300012

Item	Description	Part #	Qty
1	PAD, POLISHING 6" POLYTEX	14615	3
2	PAD, POLISHING 6" LEATHER	14617	1
3	NUT, HEX, 5/16"-18	101196	2
4	ADAPTER, PUMP TPF-22 1/4 X 1/4	128397	1
5	HOSE, VINYL, 1/4" X 3/8" TSAW (3.5FT.)	132951	1
6	WASHER, 3/8" SAE FLAT	150923	6
7	WASHER, 1/2" SAE FLAT	150924	2
8	SCREW, SOC HD CAP, 1/4"-20 X 1"	151049	1
9	SCREW, HEX HEAD MACHINE, 5/16"-18 X 3/4"	151369	2
10	WASHER, 5/16" SAE FLAT	151754	10
11	NUT, HEX, 1/4-20	151893	7
12	WASHER, 1/4" SAE FLAT	151915	11
13	SCREW, HEX HEAD MACHINE, 5/16"-18 X 1/2"	152473	6
14	SCREW, 1/4"-20 X 3/4", SOCKET HEAD CAP	152587	6
15	GFCI, 120V, 15A	152610	1
16	SCREW, HEX, 3/8"-16 X 3/4"	153527	4
17	WASHER, SAE FLAT, #10	154369	2
18	CLAMP, HOSE 1/2" - 3/4" FLOW	154394	1
19	LABEL, WARNING, READ MANUAL	154398	1
20	LABEL, NOTICE, OVERTENSION	154399	1
21	LABEL, CAUTION, RECEPTACLE	154822	1
22	LABEL, INFORMATION ON SERVICE	155038	1
23	LABEL, CAUTION, GUARDS IN PLACE	155587	1
24	LABEL, NOTICE, MOTOR PROBLEMS	155672	1
25	LABEL, WARNING, TILESAW SAFETY	155806	1
26	PUMP, WATER 115V, 60HZ	155987-VP	1
27	HOSE, WATER VINYL 3/8 X 1/2	156039	1
28	NUT, HEX 10-32	156269	6
29	TAG, SERIAL NUMBER, BLANK	157500-RW	1
30	SCREW, 1/4"-20 X 1", SHOULDER THUMB	160461	1
31	NUT, 10-32	161040	1
32	PULLEY, 1A20 X 1//2 BORE	161070	1
33	BELT, MICRO-V AX-24	161085	1
34	FEATHERING DISC ADHESIVE	161323	1
35	BARB FITTING 1/8 NPTF	161343	10
36	BRACKET, TOOL REST LH	161442	1
37	CROSS, #10-32	161532	2
38	FLAP, WHEEL	161557	3


CAB COMBO DIAMOND P/N 8300012

39	GASKET, TANK	161566	1
40	HOOD WELDMENT	161629	1
41	KNOB, 2-1/2 DIA X 3/8-16	161651	2
42	KNOB, RIDGED, GRAY	161652	3
43	TOP, MOTOR MOUNT	161668	1
44	BOTTOM, MOTOR MOUNT	161669	1
45	MTR, .33HP 115/230V 60HZ 1PH	161672	1
46	OIL, TOOL COOL, 8 OZ.	161729	1
47	PLUG, PIPE 1/8"	161763	1
48	POLISHING COMPOUND, 01 MICRON	161766	1
49	POLISHING COMPOUND, 02 MICRON	161767	1
50	POLISHING COMPOUND, 2-4 MICRON	161768	1
51	ROD, THREADED 3/8-16 X 6"LG.	161829	2
52	SCREW, 1/4-20 X 3/4 FLAT HEAD PHILLIPS MACHINE	161856	4
53	SCREW, 10-32 X 1-1/2 PAN HEAD SLOT MACHINE	161874	1
54	SCREW, PAN HEAD PHILLIPS 10-32 X 3/8"	161875	6
55	SCREW, 1/4-20 X 3/8 PAN HEAD PHILLIPS MACHINE	161877	4
56	TABLE, WELDMENT	161964	1
57	GUARD, SPLASH	161965	1
58	TOOL REST, CAB COMBO	161974	2
59	VALVE, NV2SV-B, 10/32F	161989	3
60	FITTING, 1/8 MNPT X 3/8 BARB	161991	2
61	VALVE, 1/8NPTFM X 1/4 TUBE	161992	1
62	GUARD, BLADE, COMP	162152	1
63	BRACKET, HOSE MOUNT	162154	3
64	ADAPTOR, MALE PIPE 1/8 NPTF	162315	1
65	TUBING, CLEAR PVC, 1/8 X 1/4 (36")	162505	1
66	TIE, NYLON .10 X 4.0	162505	1
67	WASHER, FLAT LARGE I.D. 1/2"	162510	2
68	CLIP, HOSE RETAINER	162511	1
69	LABEL, WARNING, SILICA, PROP 65	164202	1
70	OWNER'S MANUAL, CAB COMBO	164271	1
71	GUARD, BELT	164578	1
72	TANK, CASTING MACHINED	166064	1
73	BOX, SHIPPING, CAB COMBO	166216	1
74	BRACKET, TOOL REST RH	166439	1
75	ASSY, SHAFT/WHEELS, 6" DIAMOND	166608	1

CAB COMBO DIAMOND P/N 8300012


76	GUARD, INNER BELT	167860	1
77	BOARD, BASE	168706	1
78	LABEL, QR CODE BD MANUALS	171239	1
79	LABEL, WARNING, PROP 65, EQUIPMENT & COMPONENTS	172641	1
80	ASSY, SWITCH BOX, 30A, GP	172836-18	1
81	BELT, 6 X 1.5 DIAMOND 400 MESH	390401	1
82	BELT, 6 X 1.5 DIAMOND 600 MESH	390601	1
83	BELT, 6 X 1.5 DIAMOND 1200 MESH	391200	1
84	BELT, 6 X 1.5 DIAMOND 3000 MESH	393000	1

SHAFT P/N 166608

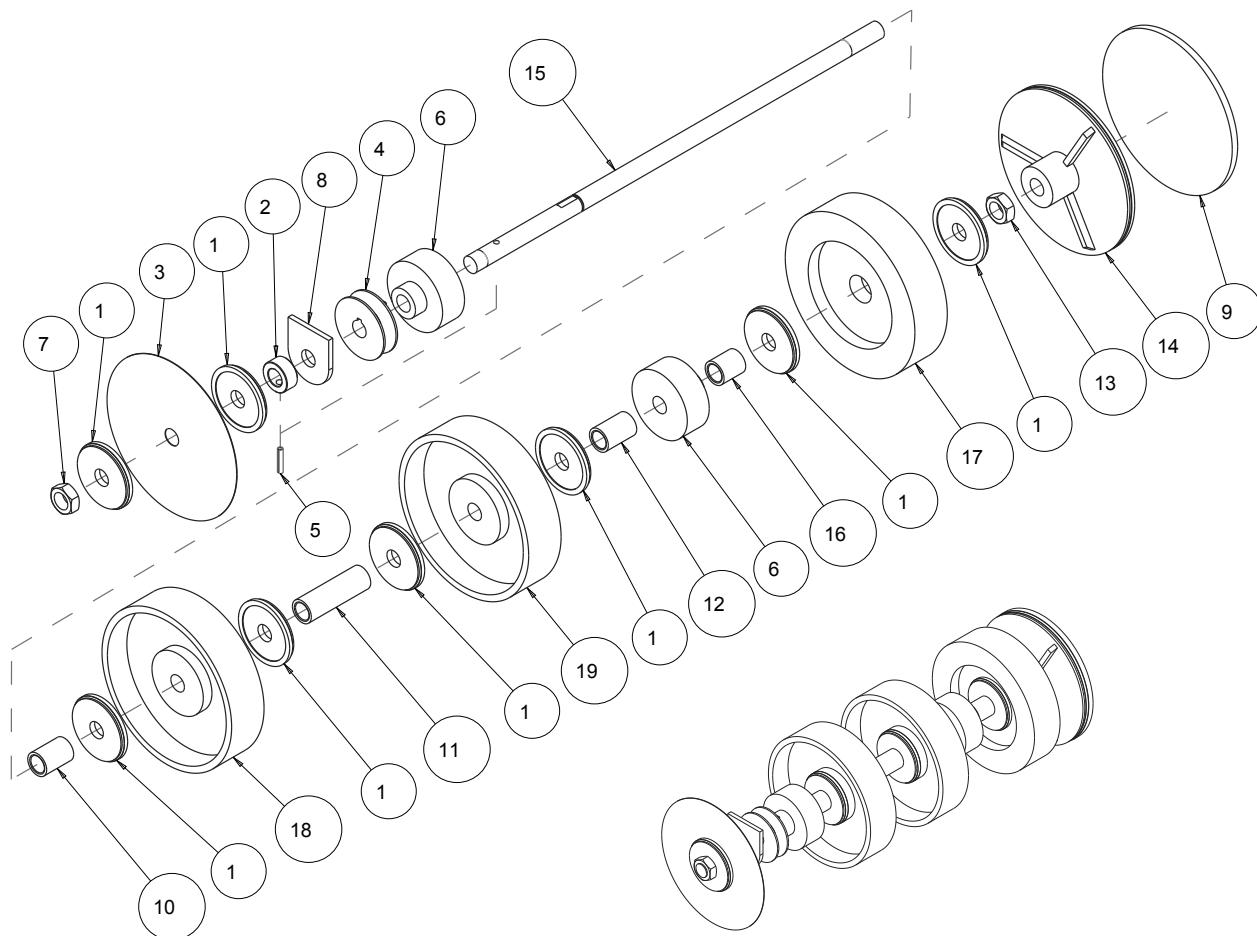

Item	Description	Part #	Qty
1	FLANGE, OUTER, 2-3/8	135830	8
2	COLLAR, SHAFT, 5/8 X 1-1/8	140012	1
3	BLADE, MK-303C, 6" X .020 X 5/8" BORE	153692	1
4	PULLEY, 1A22 X 5/8" BORE	161020	1
5	PIN ROLL, 3/16" X 1"	161089	1
6	BEARING, RUBBER, 5/8 SHAFT	161348	2
7	NUT, 5/8-18 LH HEX JAM	161704	1
8	WASHER, FELT	162000	1
9	DISC, 6" SPONGE RUBBER 1/4"	162045	1
10	SPACER, I	162507	1
11	SPACER, II	162508	1
12	SPACER, III	162509	1
13	NUT, 5/8-18 HEX JAM	162897	1
14	POLISHING WHEEL, RH	166065	1
15	SHAFT, ARBOR	166414	1
16	SPACER, IV	166606	1
17	DRUM, 6 X 1-1/2 EXPANDABLE RUBBER	390006	1
18	WHEEL, 6" BRAZED 80 GRIT	496080	1
19	WHEEL, 6" BRAZED 170 GRIT	496200	1

SHAFT P/N 166608-C

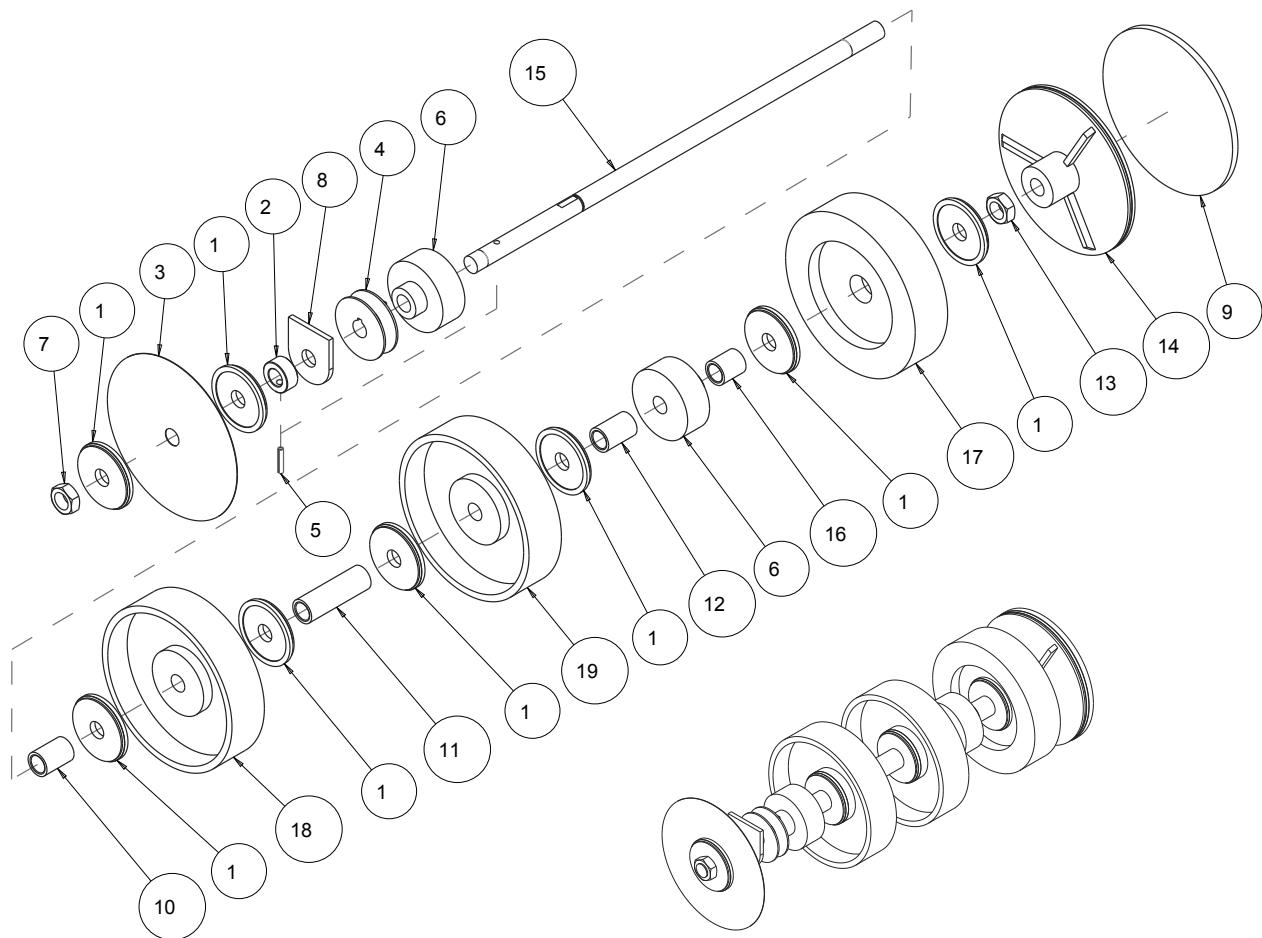

Item	Description	Part #	Qty
1	FLANGE, OUTER, 2-3/8	135830	8
2	COLLAR, SHAFT, 5/8 X 1-1/8	140012	1
3	BLADE, MK-303C, 6" X .020 X 5/8"BORE	153692	1
4	PULLEY, 1A22 X 5/8"BORE	161020	1
5	PIN ROLL, 3/16" X 1"	161089	1
6	BEARING, RUBBER, 5/8 SHAFT	161348	2
7	NUT, 5/8-18 LH HEX JAM	161704	1
8	WASHER, FELT	162000	1
9	DISC, 6" SPONGE RUBBER 1/4"	162045	1
10	SPACER, I	162507	1
11	SPACER, II	162508	1
12	SPACER, III	162509	1
13	NUT, 5/8-18 HEX JAM	162897	1
14	POLISHING WHEEL, RH	166065	1
15	SHAFT, ARBOR	166414	1
16	SPACER, IV	166606	1
17	DRUM, 6 X 1-1/2 EXPANDABLE RUBBER	390006	1
18	WHEEL, GREEN 6X1" 100 GRIT	8300000	1
19	WHEEL, GREEN 6X1" 220 GRIT	8300001	1

BARRANCA DIAMOND LIMITED WARRANTY

Please complete the warranty registration card and return. Any problems encountered should be directed to Barranca Diamond Customer Service department at (800) 630-7682 M-F 8am - 5pm PST.

Barranca Diamond warrants to the original retail purchaser for a period of 90 days except as noted, from the date of purchase all products covered by this Warranty to be free of defects in materials and workmanship.

This Warranty shall not apply to any parts that have been subjected to misuse or improper service, that had been damaged in transit or handling, or that have been altered or repaired by unauthorized representatives. This Warranty does not cover defects caused by or resulting from misuse, abuse, neglect or damage caused by accident or the failure to provide reasonable maintenance. This Warranty is void if the product or any of its individual components is altered or modified by the purchaser or if the product is used in a manner or with a blade not recommended by the manufacturer.

Any claim arising under this Warranty must be submitted by the original purchaser within the warranty period specified above, and shall include proof of purchase. During said warranty period Barranca Diamond shall, at its option, either replace or repair, at no charge to the original purchaser, any parts or components that are found to be defective by Barranca Diamond. Barranca Diamond shall not be responsible for or obligated to pay for freight or other transportation related costs or expenses in connection with any defective products or components that are either returned to Barranca Diamond's facility or any authorized repair station and/or any replacement products or components that are shipped from Barranca Diamond pursuant to this Warranty.

Parts and labor needed to maintain products and the replacement of components due to normal wear and tear are the purchaser's responsibility and are not covered by this Warranty. All products or components replaced under warranty become the property of the manufacturer. All replacement parts will be considered to be part of the original product and any warranty on such parts will expire coincidentally with the original Warranty. Barranca Diamond will pay for parts and labor in connection with warranty repairs conducted by Barranca Diamond or its authorized repair centers. Replacement part(s) installed by anyone else will be provided without a charge for such replacement part(s), but this Warranty will not apply to labor charges in connection therewith.

IN NO EVENT SHALL ANY LIABILITY UNDER THIS WARRANTY EXCEED THE REPLACEMENT COST OF ANY DEFECTIVE PRODUCT OR COMPONENT THEREOF, AND BARRANCA DIAMOND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR ANY OTHER DAMAGE OR LOSS NOT EXPRESSLY ASSUMED AS SET FORTH HEREIN.

The foregoing constitutes an expressed warranty on the terms set forth above and is the only warranty or warranties applicable to the products it covers. All other warranties, including, without limitation, the implied warranty of merchantability and/or fitness for a particular purpose or use being denied. This limited warranty is expressly in lieu of all other warranties, whether expressed or implied.

WARRANTY: For your (1) one year warranty to be effective, complete the online Product Registration as soon as possible. Visit www.mkdiamond.com/registration/

Specifics Applicable to Limited Warranty of Diamond Blades and Core Bits:**Laser Welded Blade and Bit Warranty:**

If the laser weld between the segment and the steel core or barrel fails during normal use, the blade or bit will be replaced free of charge. Blades and bits damaged due to careless or improper use are not covered under this warranty.

Brazed Blade, Bit, and Cup Wheel Warranty:

If the brazed bond between the segment and the core, barrel, or cup fails within the first .050 of segment wear, the blade, bit, or cup will be replaced free of charge. Blades, bits, and cup wheels damaged due to careless or improper use are not covered under this warranty.

Continuous Rim Blade Warranty:

If the bond between the rim and the core fails during normal use, the blade will be replaced free of charge. Blades and bits damaged due to careless or improper use are not covered under this warranty.

Exclusions:

Barranca Diamond does not warrant the following components, which carry their own manufacturer's warranty for the indicated periods:

Electric Motors Manufacturer's Warranty

Baldor: 1 year

Ryobi: 1 Year

Soga: 1 Year

Gas Engines Manufacturer's Warranty

Honda: 2 years

Engine Power Information

Engine power ratings are calculated by the individual engine manufacturer and the rating method may vary among engine manufacturers. Barranca Diamond Products makes no claim, representation or Warranty as to the power rating of the engine on this equipment and disclaims any responsibility or liability of any kind whatsoever with respect to the accuracy or the engine power rating. Users are advised to consult the engine manufacturer's owners manual and website for specific information regarding the engine power rating.

REPLACEMENT PARTS

Replacement parts for this tool may be ordered from your Barranca Diamond distributor or directly from Barranca Diamond. Please have the following information ready before calling:

- Model and serial number of the machine
- Date of purchase
- Description of parts being ordered (see parts list)

RETURN MATERIALS PROCEDURE

To expedite the service relative to the return of a product purchased through Barranca Diamond, please have the following information available:

- Model and serial number of the machine
- Date of purchase
- Distributor's name

Then please call Barranca Diamond at (310) 523-5867 or toll free at 800-630-7682 to obtain a Return Goods Authorization number (RGA) authorizing the return.

Please Note:


- Ensure your item(s) are prepaid to the destination
- Return items must have been purchased within the previous twelve (12) months
- Follow the packaging instructions in the following section
- Be sure to include the RGA number, return address and your phone number on or within the return shipping box.

PACKAGING INSTRUCTIONS

Ship the equipment using its original shipping crate if possible. Secure inside the shipping crate. Ensure all parts are secured in the packaging to prevent movement. Do not ship the equipment partially exposed.

NOTES

CAB COMBO WORKSHOP
OWNER'S MANUAL
& PARTS LIST

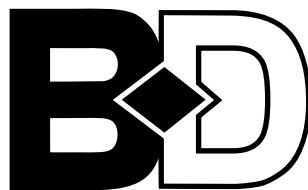

BARRANCA DIAMOND

Barranca Diamond Products, Inc.
1315 Storm Parkway
Torrance, CA 90501

Toll-Free: (800) 421-5830
Phone: (310) 539-5221
Fax: (310) 539-5158
www.barrancadiamond.com